


UNI-LIFT 5000 CLT / PLUS

Automotive lift date: 11/2001
Manual date: 26.11.2001

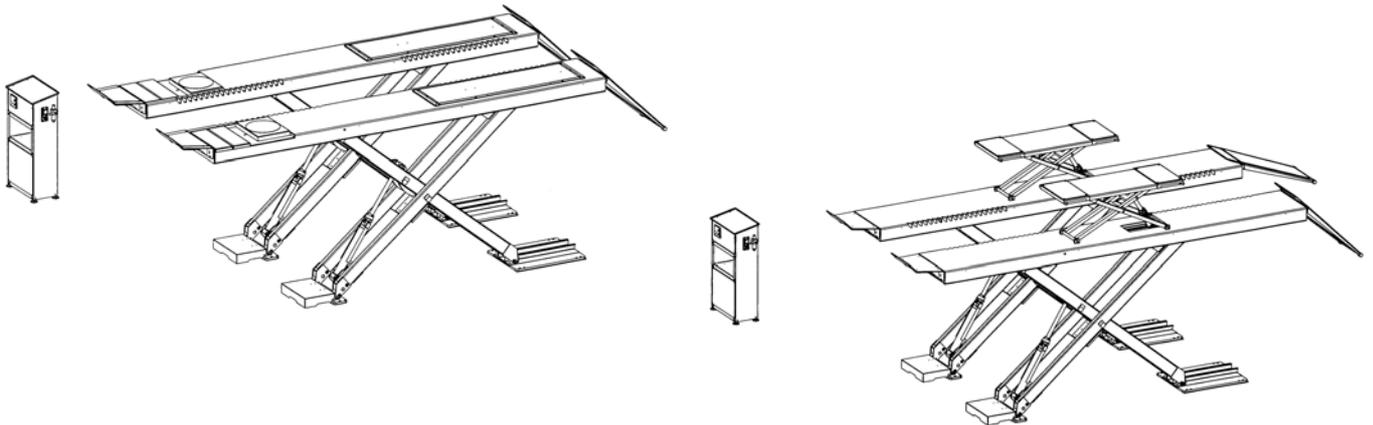

Operating Instruction and Documentation

Serial number:.....

Retailer address / phone



Nussbaum

Nussbaum Hebetchnik GmbH & Co.KG//Korker Straße 24//D-77694 Kehl-Bodersweier//Tel: +49(0)7853/8990
Fax: +49 (0) 78 53 / 87 87//E-mail: info@nussbaum-lifts.de//<http://www.nussbaum-lifts.de>

Table of contents

Foreword	3
Record of installation	5
Record of handing over	6
1. Introduction	7
1.1 Installation and check of the automotive lift	7
1.2 Information of Warning	7
2. Master document of the automotive lift	8
2.1 Lift–manufacturer	8
2.2 Application	8
2.3 Changes at the construction	8
2.4 Displacement of the automotive-lift	8
3. Technical information	10
3.1 Technical ratings	10
3.2 Security devices	10
3.3 Datasheet	12
4. Safety regulations	19
5. Operating instructions	19
5.1 Lifting the vehicle	20
5.2 Lowering the vehicle	20
5.3 Lifting the vehicle with the wheel free lift	20
5.4 Lowering the vehicle with the wheel free lift	21
5.5 Equalisation of the 2 rails (main lift)	21
5.6 Manual equalisation of the lift	21
6. Troubleshooting	22
6.1 Driving on an obstacle	23
6.2 Emergency lowering of the main lift/ wheel free lift	24
6.3 Reset the main lift after an emergency lowering	28
7. Inspection and Maintenance of Nussbaum lifts	29
7.1 Maintenance plan of the lift	29
7.2 Cleaning of the automotive lift	30
8. Security check	31
9. Installation and Initiation	31
9.1 Installation of the automotive lift	31
9.2 Regulations for the installation	31
9.3 Erection and doweling of the lift	32
9.4 Initiation	33
9.5 Changing the installation place	34
First security check before installation	37
Regular security check	38
Extraordinary security check before initiation	46
Manual service operation over the keyboard	47
Hydraulic diagram without wheel free lift	51
Hydraulic diagram with wheel free lift	53
Electric diagram without wheel free lift	55
Electric diagram with wheel free lift	56

Foreword

Nussbaum-Lifts are a result of long-standing experiences.

The high quality and the superior concept guarantee them reliability, a long lift time and the economic business. To avoid unnecessary damages and dangers, read the operating instruction attentive and observe the contents. Another or the described purpose going out use is not valid when not as agreed. This is valid particularly for climb and go.

Company Nussbaum is not liable for damages arising from this. The user carries the risk alonely.

For the use belonged:

- to observe all the notice in the operating instruction and
- the following of the inspection and maintenance work and the prescribed tests.
- The instruction for use have to be observed by all persons working with the lift.
- Especially the chapter "Safety/accident Prevention" has to be observed.
- In addition to the safety remarks of the instructions for use the regulations and instructions being valid at the place of operation have to be considered.

Obligations of the operator:

The operator is obliged to allow only those persons complying to the following requirement to work at the unit

- being well acquainted with the basic regulations concerning labour safety and accident prevention and being trained to operate the unit.
- having read and understood the chapter concerning safety and warning instructions and confirmed that by their signature.

Dangers when operating with the lift:

The Nussbaum-Lifts are designed and built according to technical standard and the approved regulations for technical security. Yet, danger for body and life of the operator may turn up when using the lift inexpertly.

The lift must only be operated :

- for its appropriate use
- in unobjectionable condition concerning technical security.

Organising requirements

- The instructions for use are constantly to be kept at the place of operation being at hand at any time.

- In addition to the instructions for use rules pertaining to other regulations i.e. accident prevention and environmental rules are to be observed and directed.
- Safety- and danger alert operation of personal is occasionally and by observing the instructions for use to be controlled.
- As far as required and ordered by regulations personal protective equipment is to be used
- All safety- and danger-hints at the lift are to be observed!
- Spare parts must comply with technical requirements laid down by the manufacturer. This is only warranted with original parts.
Consider time intervals given or fixed in instructions for use for repeated tests/inspections.

Maintenanceworks, remedy of faults and disposal

- Fixed Adjusting-, maintenance- and inspectionworks and time intervals including Details for exchange of parts/part components as mentioned in the instructions for use are to be adhered.
These works must only be carried out by expert personal.
- After maintenance- and repair works loose screw connections must always be firmly tightened!

Guarantee and liability

- Our „General conditions of selling and delivering“ are in force.
There will be no guarantee or liability for injuries of persons or things if these injuries are caused by one or by some of the following reasons.
- Inappropriate use of the lift.
- Inappropriate installation, initiation, operation and maintenance of the lift.
- Use of the lift while one or several security devices do not work or do not work correctly or are not installed correctly.
- Not to follow the regulations of the operating instruction concerning transport, storing, installation, initiation, operation and maintenance of the lift.
- Changes of the construction of the lift without asking the producer.
- Changes of important adjustments of the lift (e.g. driving elements, power rating, motor speed, etc)
- Wrong or incorrect maintenance.
- Catastrophes, acts of God or external reasons.

Record of handing over

The automotive lift UNI 5000 CLT / PLUS with the
serial number:..... was installed on:.....
at the firm:..... at:.....
the safety was checked and the lift was started.

The persons below were introduced after the installation of the automotive lift. The
introduction was carried out from an erector of the lift-manufacturer or from a franchised
dealer (competent person).

.....
date name signature

.....
date name of competent signature of the competent

Your customer service:.....

1. Introduction

The document "**Operating Instruction and Documentation**" contains important information about installation, operation and maintenance of the lift.

To furnish proof of the **installation of the automotive lift** the form "Record of Installation" must be signed and returned to the manufacturer.

To furnish proof of the singular, regular and extraordinary check this documentation contains forms. The forms should be used to document the checks. They should not be removed from this documentation.

Every **change of the construction** and **displacement** of the automotive lift has to be registered in the "**Master document**" of the lift.

1.1 Installation and check of the automotive lift

Only specialist staff is allowed to do work concerning safety and to do the safety checks of the lift. They are called experts and competent persons in this document.

Experts are persons (for example self-employed engineers, experts) which have received instruction and have experience to check and to test automotive lifts. They know the relevant regulations concerning both labour and accidents prevention.

Competent persons are persons who have acquired adequate knowledge and experience with automotive lifts. They took part in training from the lift-manufacturer (servicing technicians of the manufacturer or dealer are competent)

1.2 Information of Warning

To show danger and to show important information the three symbols below are used. Pay attention to those passages, which are marked with these symbols



Danger! This sign indicates danger to life. Inexpert handling of the described operation may be dangerous to life.



Caution! This sign cautions against possible damage to the automotive lift or other material defects in case of inexpert handling.



Attention! This sign indicates an important function or another important note.

2. Master document of the automotive lift

2.1 Lift–manufacturer

Otto Nussbaum Hebetchnik GmbH & Co. KG
Korker Straße 24
D-77694 Kehl-Bodersweier

2.2 Application

The automotive lift UNI-LIFT 5000 CLT / Plus is a lifting mechanism for lifting motor vehicles with a laden weight of up to 5000 kg. The max. load distribution is 2:1 in or against drive-on direction.

The wheel free lift is a lifting mechanism for lifting motor vehicles with a laden weight of up to 3500 kg. The max. load distribution is 2:1 in or against drive-on direction.

The automotive lift is only designed for servicing vehicles. It is not allowed to carry persons with the lift. It is not allowed to climb on the lift or on the vehicle. It's not allowed to install the standard-automotive lift in a hazardous location or washing bays.

After changes of the construction after essential maintenance work on carrying parts and after changing the installation place, an expert has to check the lift and to confirm its correctness and security.

2.3 Changes at the construction

Changes at the construction, expert checking, resumption of work
(date, kind of change, signature of the expert)

.....
.....
.....

name, address of the expert

.....
place, date

.....
signature of the expert

2.4 Displacement of the automotive-lift

Displacement of the automotive-lift, expert checking, resumption of work
(date, kind of change, signature of the expert)

.....
.....
.....

name, address of the expert

.....
place, date

.....
signature of the expert

page for notice

3. Technical information

3.1 Technical ratings

capacity without wheel free lift	5000 kg
load distribution	max. 2:1 in or against drive-on direction
Lifting time (main lift)	approx. 31 sec. with load
Lowering time (main lift)	approx. 17 sec. with load
Maximal lifting height:	1930 mm
capacity wheel free lift	3500 kg
load distribution	max. 2:1 in or against drive-on direction
Lifting time (wheel free lift)	approx. 13 sec. with load
Lowering time (wheel free lift)	approx. 15 sec. with load
Maximal lifting height	580 mm
Line voltage	3 x 400 Volt , 50Hz
Power rating	3 kW
Motor speed	3000 rot./min.
Pump capacity	3 ccm
Hydraulic pressure main lift	ca. 240 bar with load
Hydraulic pressure wheel free lift	ca. 215 bar with load
pressure relief valve main lift	ca. 260 bar
pressure relief valve unlocking cylinder	ca. 35 bar
Oil tank	approx. 40 Litre
Sound level	≤ 75 dBA
Connection by customer	3~/N+PE, 400V, 50 Hz (standard version) with fuse T16A (Pay attention to the voltage of your state)

3.2 Security devices

1. Pressure relief valve
 - Overprint-safety of the hydraulic system
2. Holding valve
 - safety device against unintentional lowering
3. Lockable main switch
 - safety device against unauthorised operation
7. CE-STOP
 - safety device against squeeze
5. Hydraulic unblockable security system at the cylinders
 - safety device against unintentional lowering of the wheel free lift
6. Interactive security system
 - The Safety-Star-System (SST) controls the actions of the lift while the lift lowers or raises.

- Normally, the lift lowers with a speed of 0,05 meters in a second.
If the speed increases, e.g. because of a leakage of the hydraulic system, the SST detects the problem and stops the lift by closing the oil supply of the hydraulic cylinders.
- Switch off the main switch.
- Control the complete hydraulic system and call your service partner if there is any defect!
- The lift can be repaired by a competent person with knowledge and experience, who has joined a special training of the lift manufacturer (Erectors of the manufacturer and its retailers are competent persons).


CE-STOP (main lift and wheel free lift)


- When rail of the lift is approximately 320 mm high, the lowering stops automatically.
- Check the dangerous places of the lift and be sure that there are no objects or people in the immediate area of the lift or on the lift.
- Push the button „lowering“ and keep it pushed until the lift has reached his lowest position. You hear an acoustic signal while you lower the lift in his end-position.


Top-limit

- When the lift has reached his maximal height the SST stops the lift automatically.

3.3 Datasheet

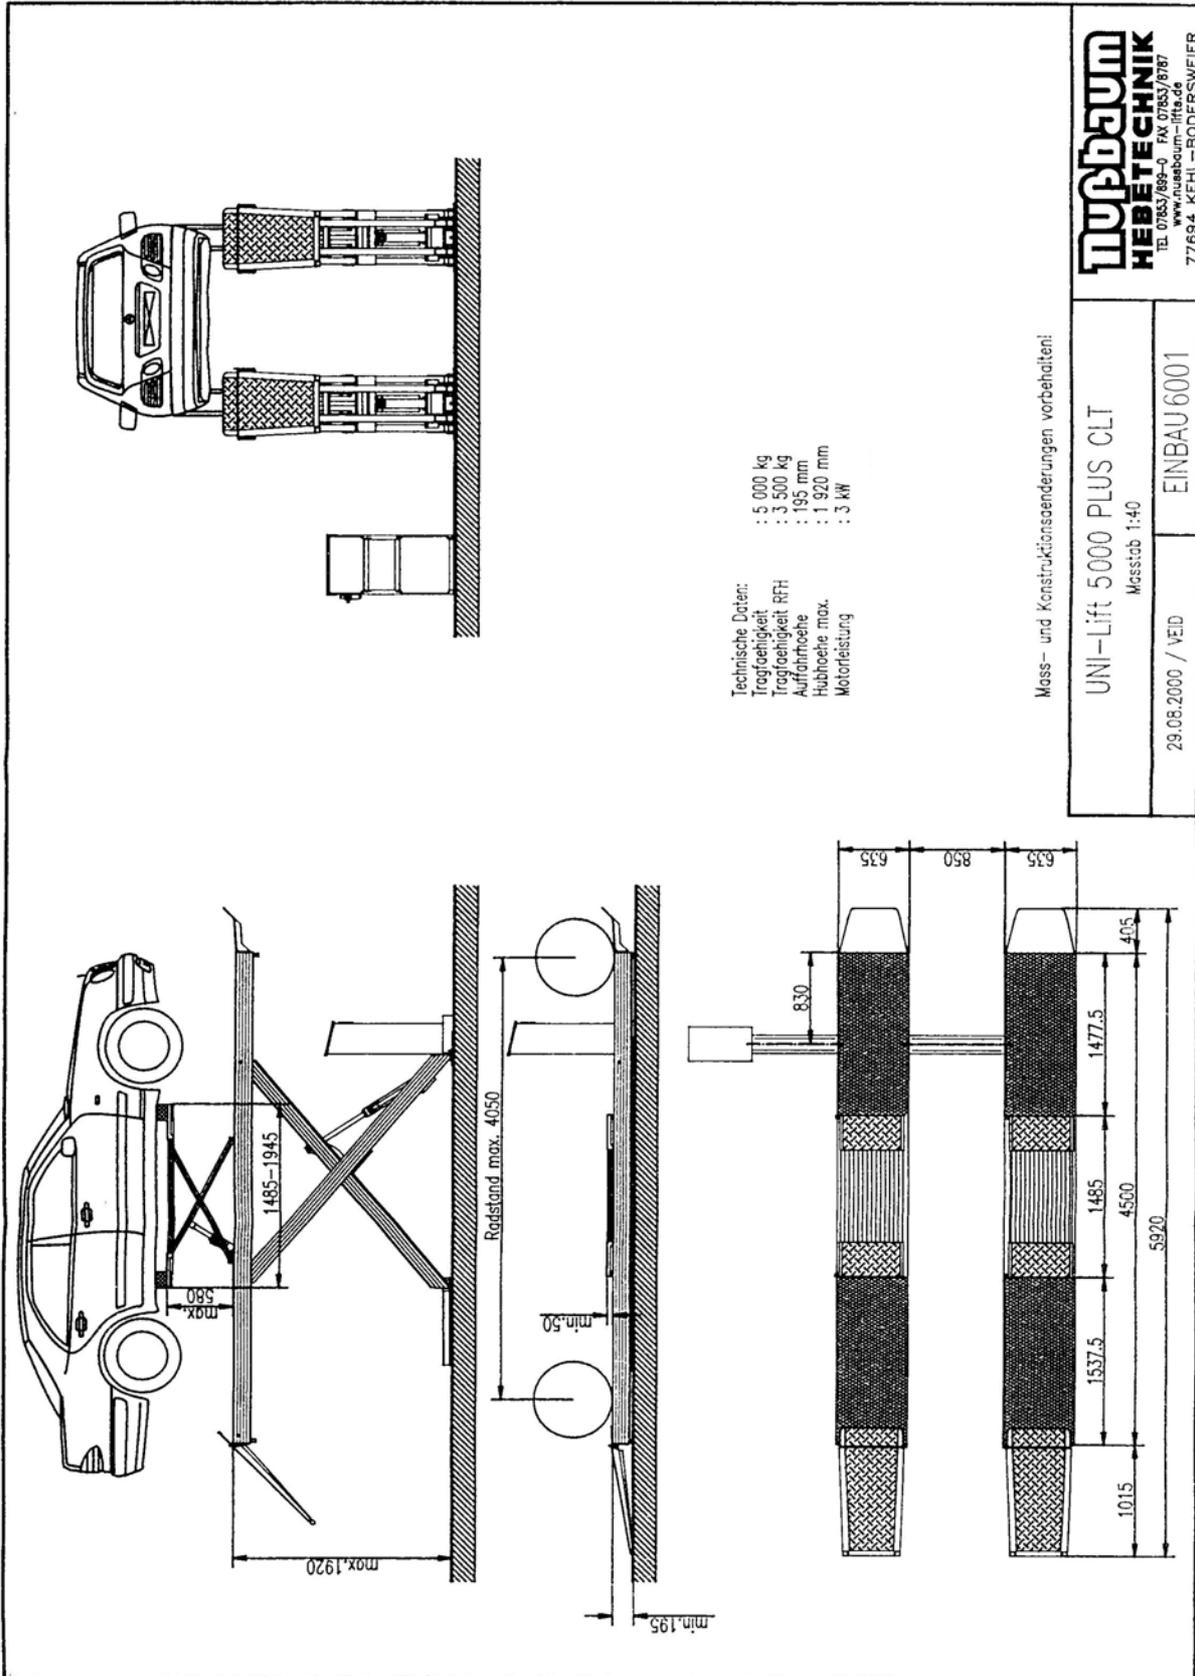

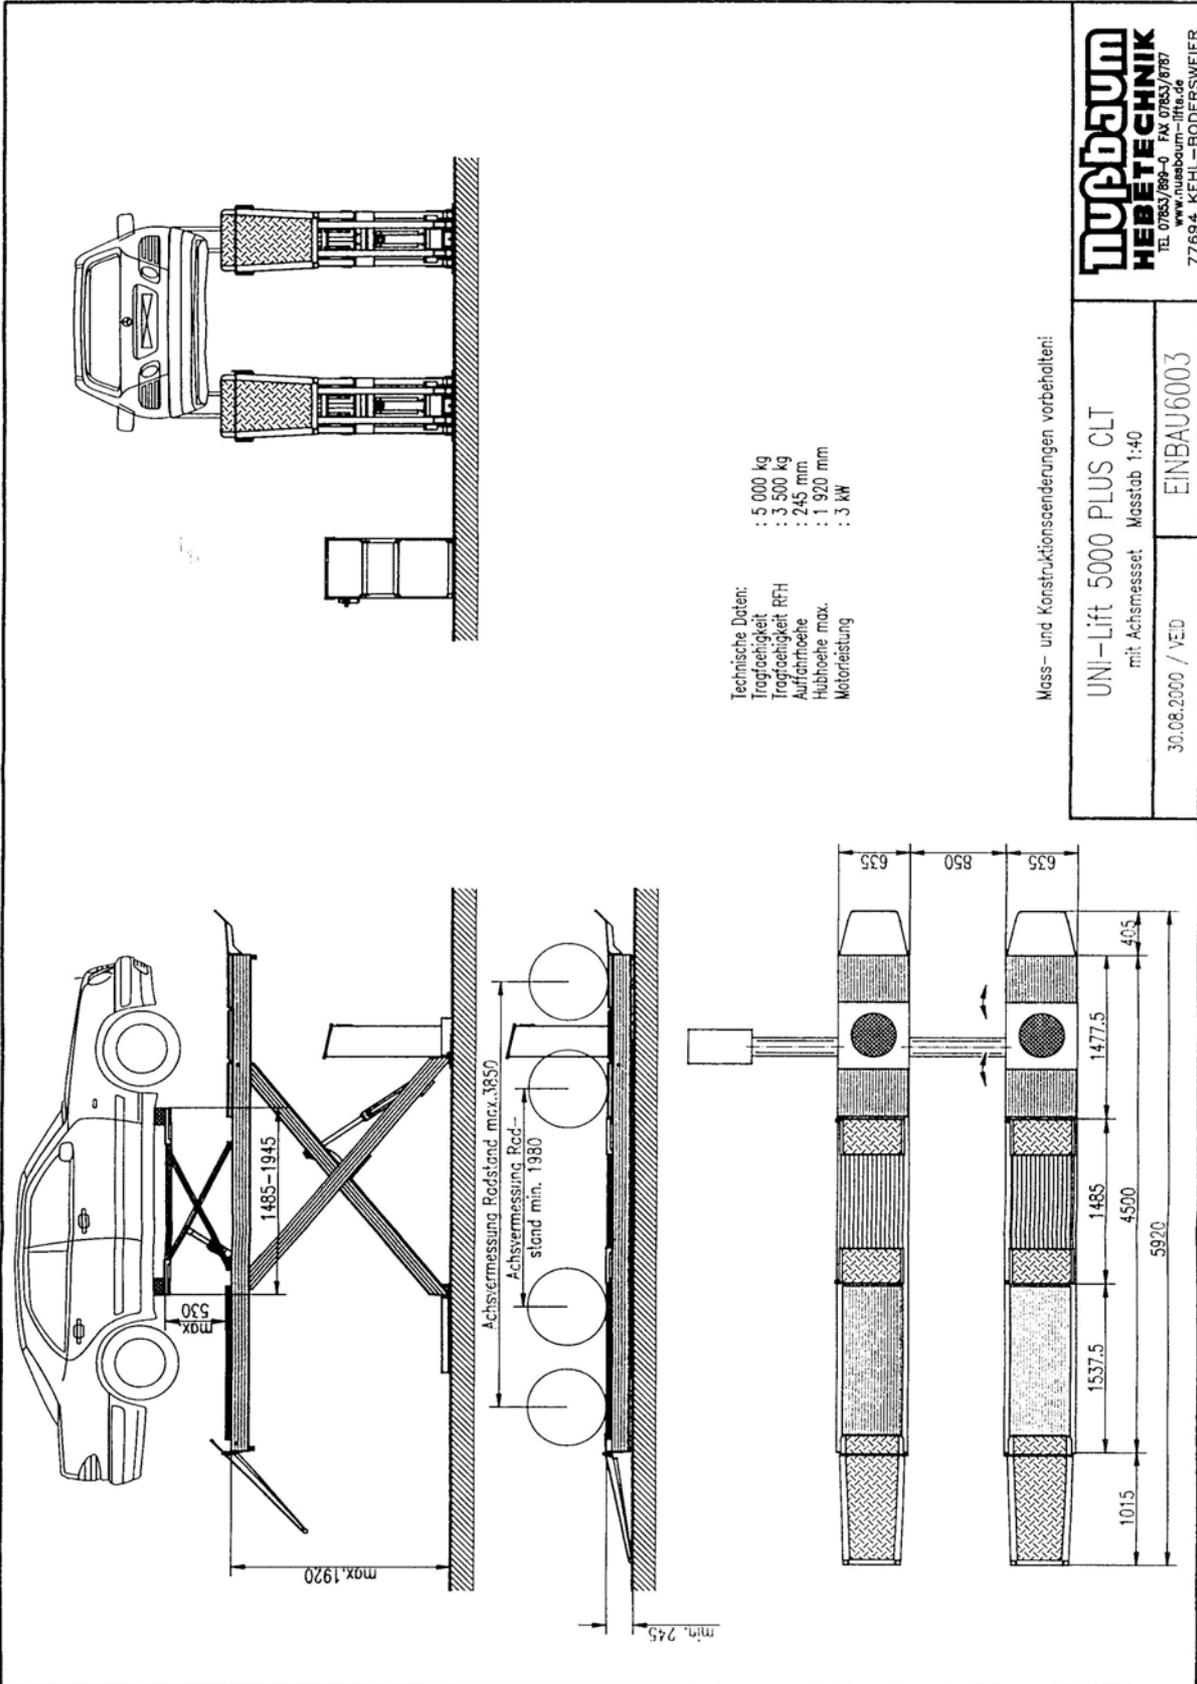

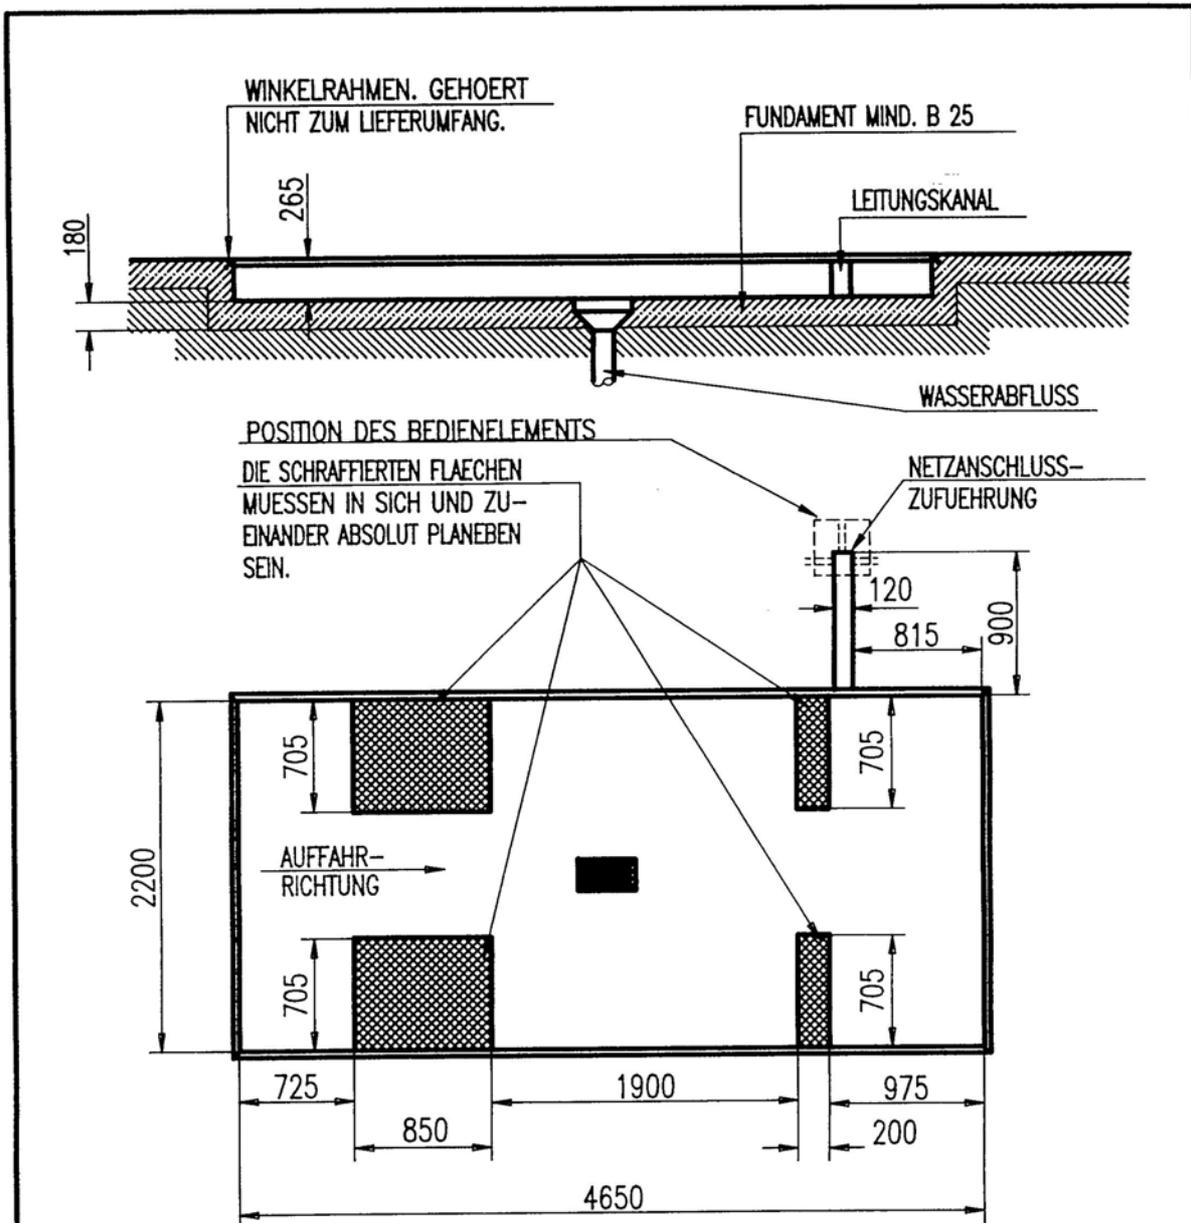

ACHTUNG: GILT NUR FUER DIE SERIENAUSFUEHRUNG MIT STELLPLATTEN UND
BEIDSEITIGEN AUFFAHRKLAPPEN.
ANSTELLE DES LEITUNGSKANALS KANN AUCH EIN LEERROHR
Ø 100 VERLEGT WERDEN.

BAUSEITS IST FOLGENDES ANZUBRINGEN:

NETZANSCHLUSS 3 /N+PE, 400V, 50Hz, KABELLAENGE CA. 2m
WASSERABFLUSS IN DER VERTIEFUNG

Gilt auch fuer Radfreibeber bodeneben !


GRUBENMASSE UNI-LIFT 5000 CLT / NT
mit durchgehender Grube fuer Achsheber, Oberkante Achsmesset bodeneben,
Schienerloenge 4 500 mm

24.10.2000 / M.A

EINBAU 6004

NUSSBAUM
HEBETECHNIK

FERTIGUNGSTECHNIK + MASCHINENBAU
77694 KEHL-BODERSWEIER

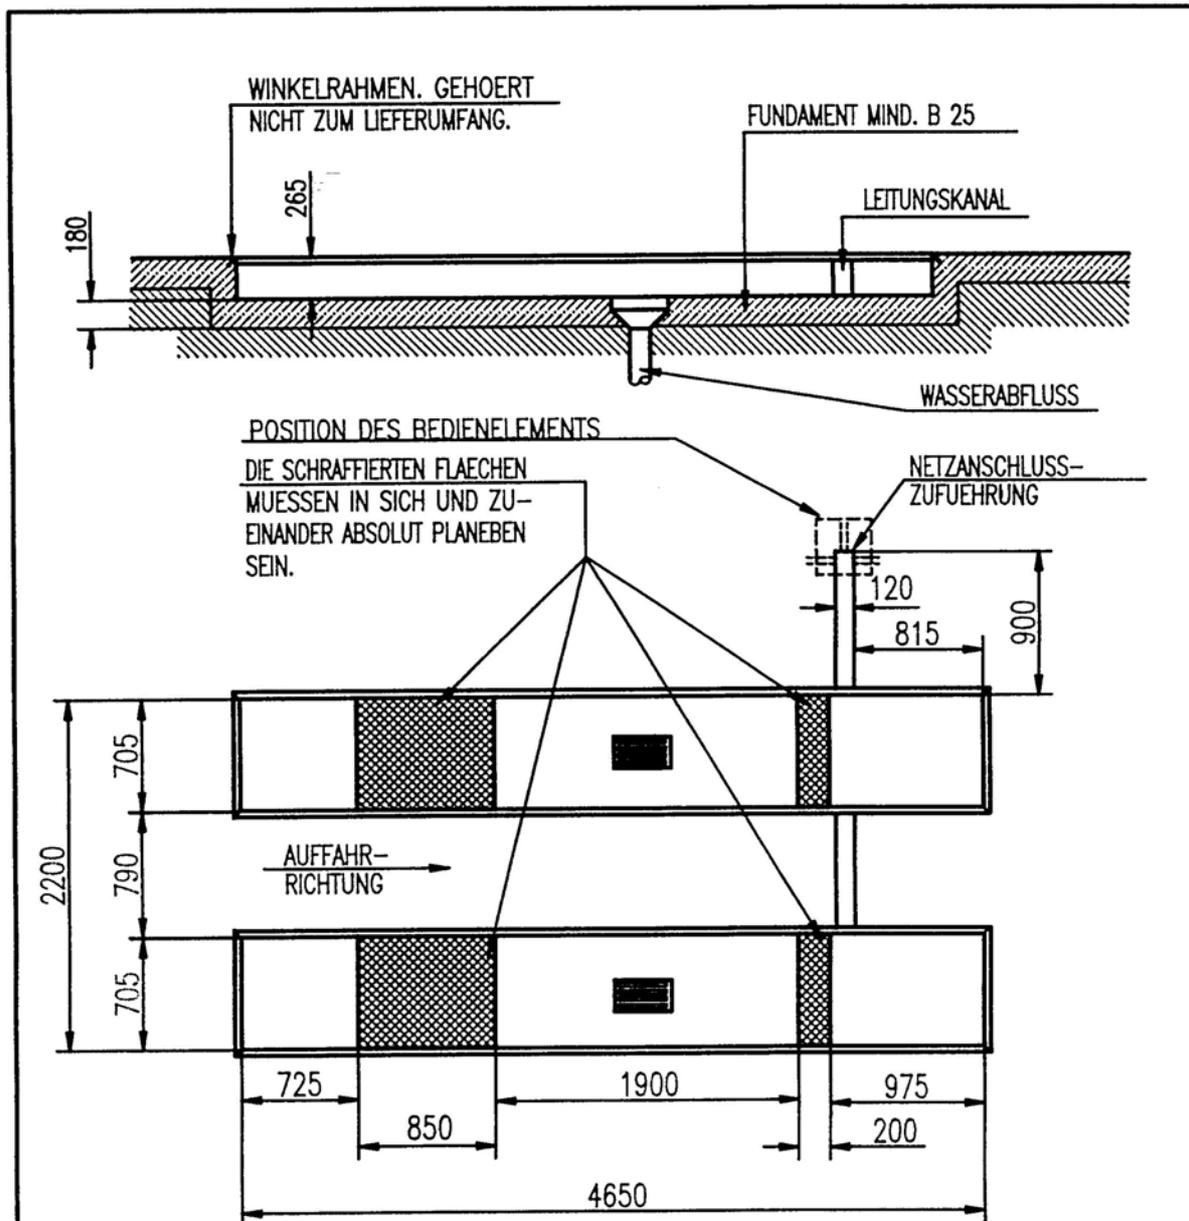

ACHTUNG: GILT NUR FUER DIE SERIENAUSFUHRUNG MIT STELLPLATTEN UND BEIDSEITIGEN AUFFAHRKLAPPEN.
ANSTELLE DES LEITUNGSKANALS KANN AUCH EIN LEERROHR \varnothing 100 VERLEGT WERDEN.

BAUSEITS IST FOLGENDES ANZUBRINGEN:

NETZANSCHLUSS 3 / N+PE, 400V, 50Hz, KABELLAENGE CA. 2m
WASSERABFLUSS IN DER VERTIEFUNG

GRUBENMASSE UNI-LIFT 5000 CLT / NT


OBERKANTE ACHSMESSET UND RADFREIHEBER BODENEHEBEN, SCHIENENLAENGE 4 500 MM

25.10.2000 / M.A

EINBAU 6005

NUSSBAUM
HEBETECHNIK

FERTIGUNGSTECHNIK + MASCHINENBAU
77694 KEHL-BODERSWEIER

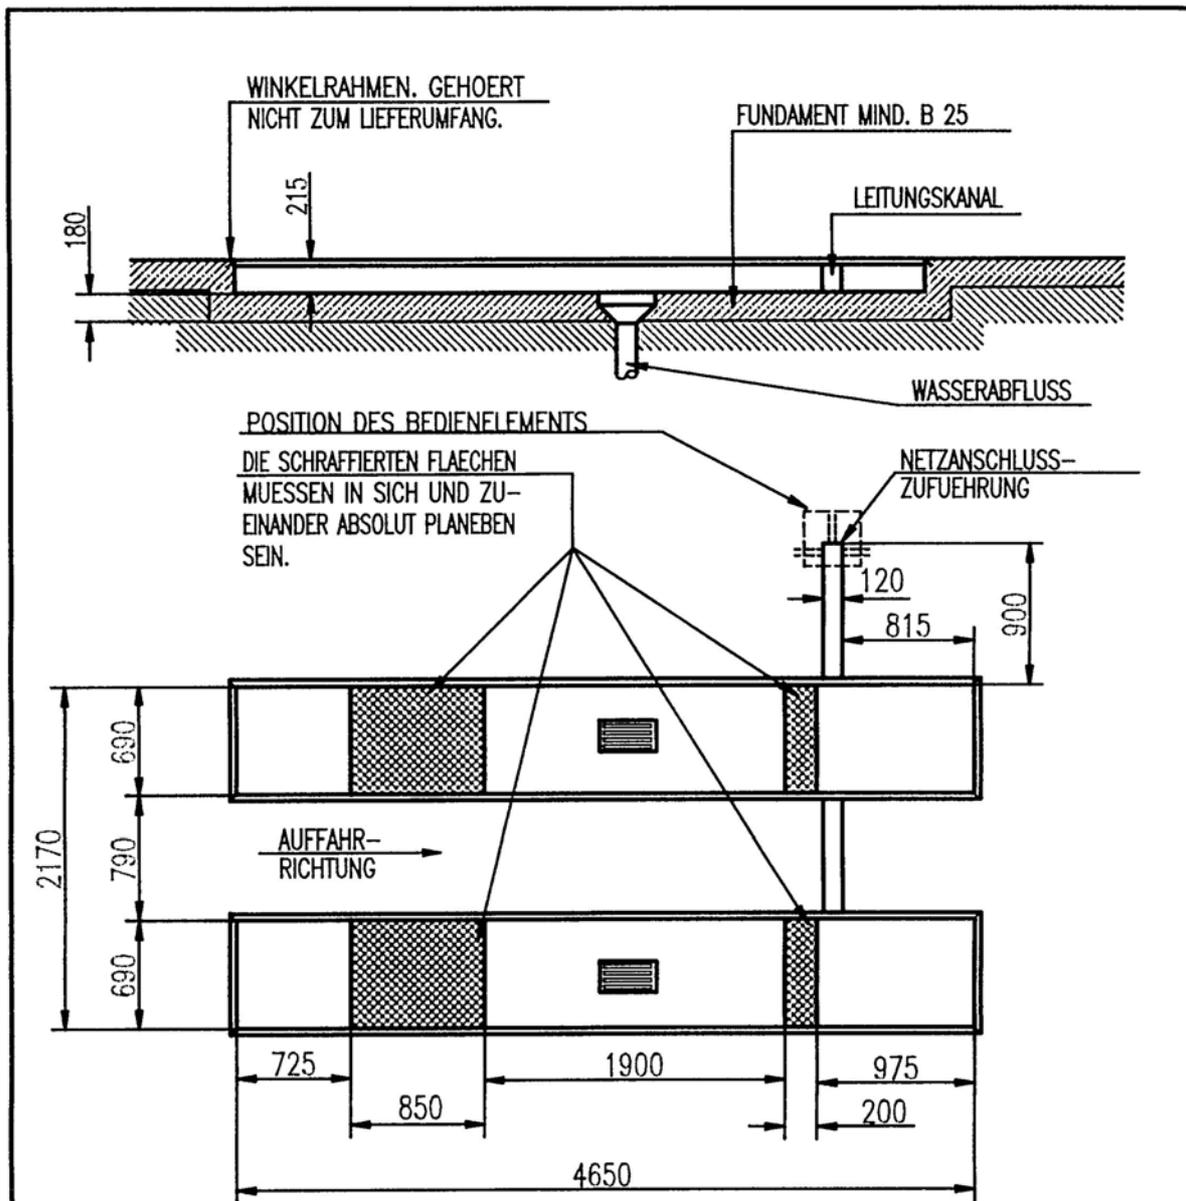

ACHTUNG: GILT NUR FÜR DIE SERIENAUSFÜHRUNG MIT STELLPLATTEN UND BEIDSEITIGEN AUFFAHRKLAPPEN.
ANSTELLE DES LEITUNGSKANALS KANN AUCH EIN LEERROHR \varnothing 100 VERLEGT WERDEN.

BAUSEITS IST FOLGENDES ANZUBRINGEN:

NETZANSCHLUSS 3 / N+PE, 400V, 50Hz, KABELLÄNGE CA. 2m
WASSERABFLUSS IN DER VERTIEFUNG

GRUBENMASSE UNI-LIFT 5000 CLT / NT


OBERKANTE AUFFAHRSCHEIBE BODENEHEBEN, SCHIENENLÄNGE 4 500 MM

29.09.2000 / M.A

EINBAU 6006

NUSSBAUM
HEBETECHNIK

FERTIGUNGSTECHNIK + MASCHINENBAU
77694 KEHL-BODERSWEIER

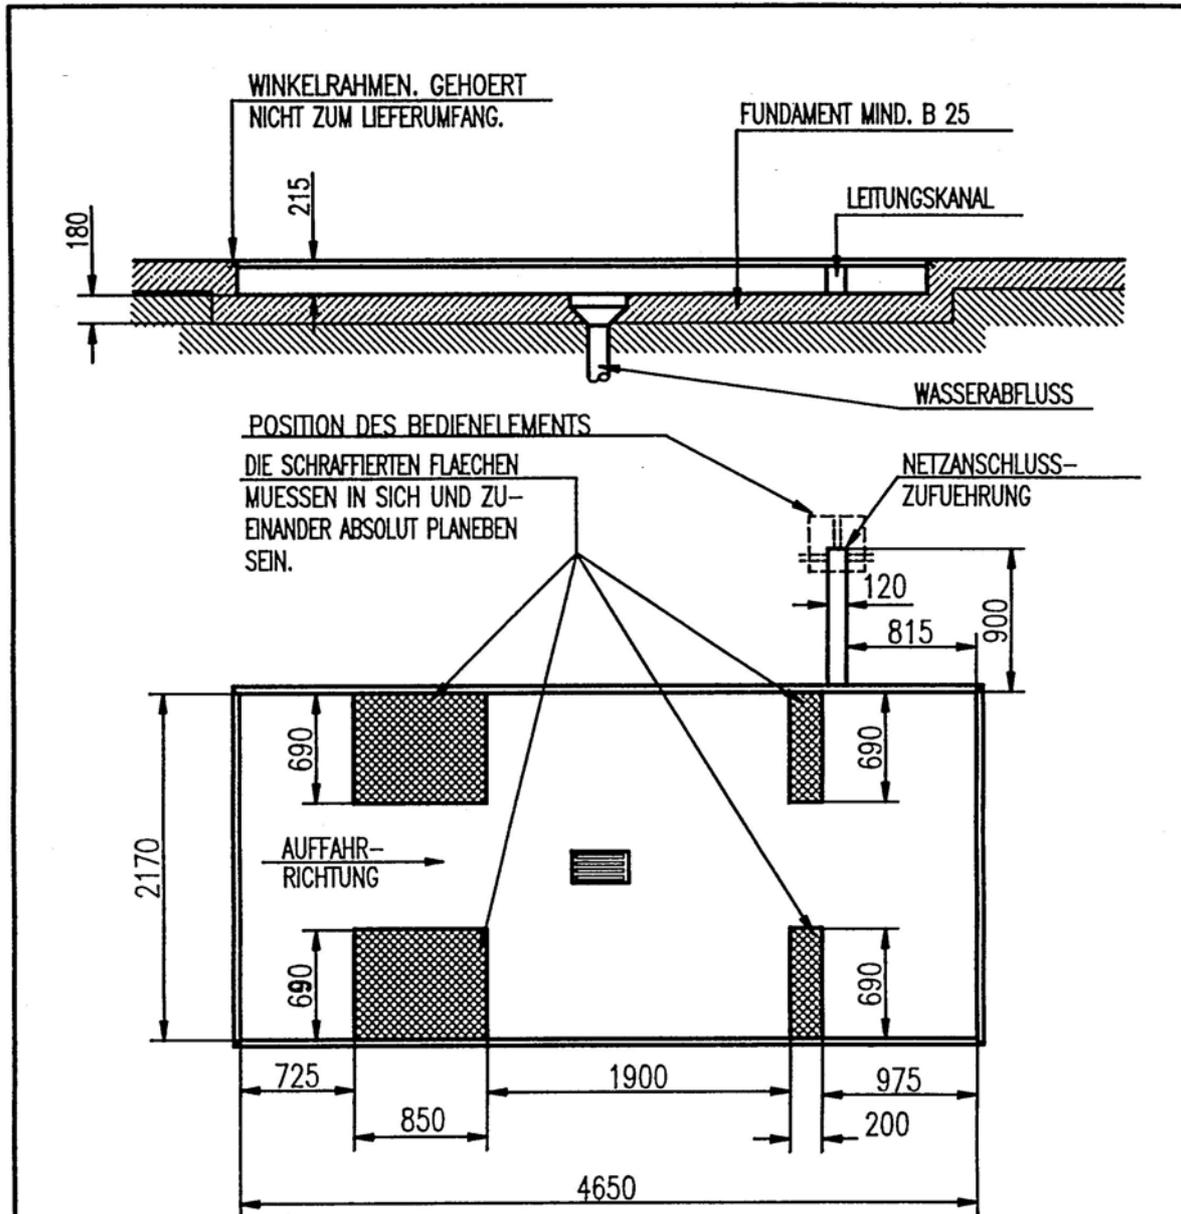

ACHTUNG: GILT NUR FUER DIE SERIENAUSFUEHRUNG MIT STELLPLATTEN UND BEIDSEITIGEN AUFFAHRKLAPPEN.
ANSTELLE DES LEITUNGSKANALS KANN AUCH EIN LEERROHR \varnothing 100 VERLEGT WERDEN.

BAUSEITS IST FOLGENDES ANZUBRINGEN:

NETZANSCHLUSS 3 /N+PE, 400V, 50Hz, KABELLAENGE CA. 2m
WASSERABFLUSS IN DER VERTIEFUNG

GRUBENMASSE UNI-LIFT 5000 CLT / NT
mit durchgehender Grube fuer Achsheber, Oberkante Auffahrschiene bodeneben,
Schienenloenge 4 500 mm

04.10.2000 / M.A

EINBAU6007

**NUßBAUM
HEBETECHNIK**

FERTIGUNGSTECHNIK + MASCHINENBAU
77694 KEHL-BODERSWEIER

4. Safety regulations

Using automotive lifts for working the regulations of accident EN1493/Aug.98 (CEN/TC 98 „Automotive lifts”) must be observed.

Especially the following regulations are very important:

- The laden weight of the lifted vehicle mustn't be more than 4000 kg for the automotive lift, 5000 kg for the automotive lift with wheel free lift.
- The laden weight of the lifted vehicle mustn't be more than 2500 kg for the wheel free lift.
- The automotive lift must be lowered completely, before the vehicle is driving, in the provided direction, on the lift.
- During working with the lift the operating instruction has to be followed.
- At vehicles with low sub-ground clearance or with optional equipment (sport equipment) or sport-vehicles, it is to be tested previously whether damages can appear.
- Only trained personnel over the age of 18 years old are to operate this lift.
- Position the polymer supports as described of the vehicle manufacturer under the vehicle. (Version with wheel free lift)
- The correct position of the polymer pads has to be checked after the vehicle has been lifted a little bit.
- It's not allowed to stay under the lifted or lowered vehicle (except for the operator).
- Check the center of gravity of the vehicle if heavy parts are removed. (Version with wheel free lift)
- It's not allowed to transport passengers on the lift or in the vehicle.
- It's not allowed to climb onto the lift or onto a lifted vehicle.
- The automotive lift must be checked from an expert after changes in construction or after repairing carrying pads.
- It's not allowed to start with operations at the lift before the main switch is switched off.
- During lifting or lowering the vehicle it must be observed from the operator.
- It's not allowed to install the standard-automotive lift in hazardous location or in washing bays.

5. Operating instructions



***The Safety Regulations must be observed during working with the automotive lift.
Read the safety regulations in chapter 4 carefully before working with the lift!***

5.1 Lifting the vehicle

- Drive vehicle over the lift, longitudinal axes on line of the lift.
- Block the vehicle against rolling, put into gear.
- Check the dangerous places of the lift and be sure that there are no objects or people in the immediate area of the lift or on the lift.
- Switch on the control system; main switch on position "1" (see pic.1)
- Raise the lift. Press the button „lifting“.
- Lift the vehicle on the working height.
- Observe the complete process.

pic. 1: operation unit



<i>main switch</i>	
<i>button „lifting“ main lift.....</i>	<i>Bühne</i>
<i>button „lowering“ main lift.....</i>	<i>Bühne</i>
<i>button „lifting“ wheel free lift.....</i>	<i>R.F.H.</i>
<i>button „lowering“ wheel free lift.....</i>	<i>R.F.H.</i>
<i>light.....</i>	<i>Licht</i>
<i>equalization.....</i>	<i>Ausgleichen</i>

5.2 Lowering the vehicle

- Check the dangerous places of the lift and be sure that there are no objects or people in the immediate area of the lift or on the lift.
- Lower the vehicle to the working height or until the platform reaches the lowest point; press the button „lowering“ .
- Before the lift reaches the lowest position, it stops (approx. 150 mm).
Let off the „lowering“. Control the dangerous places. Press the button again. You hear an acoustic signal until the lift reaches the lowest position.
- Observe the complete process.
- Drive the vehicle out of the lift if the lift (main lift) is in the lowest position.

5.3 Lifting the vehicle with the wheel free lift

- Drive vehicle over the lift, longitudinal axes on line of the lift.
- Block the vehicle against rolling, put into gear.
- Position the polymer supports under the pick-up points which are described by the vehicle manufacturer. Do not lay them on edge! The vehicle might fall down!
- Check the dangerous places of the lift and be sure that there are no objects or people in the immediate area of the lift or on the lift.
- Switch on the control system; main switch on position "1" (see pic.1)
- Raise the lift. Press the button „lifting“ (R.F.H.)

- Lift the vehicle on the working height.
- Observe the complete process.

5.4 Lowering the vehicle with the wheel free lift


- Check the dangerous places of the lift and be sure that there are no objects or people in the immediate area of the lift or on the lift.
- Lower the vehicle to the working height or until the platform reaches the lowest point; press the button „lowering“ (R.F.H.)
- Before the lift reaches the lowest position, it stops (approx. 150 mm). Let off the button „lowering“. Control the dangerous places. Press the button again. You hear an acoustic signal until the lift reaches the lowest position
- When the lift is in its lowest position, remove the polymer supports
- Drive the vehicle out of the lift if the lift (main lift) is in the lowest position.

5.5 Equalisation of the 2 rails (main lift)

- Press button „Equalize“ at the operation unit. The rails of the main lift equalize. It is not possible to equalize the wheel free lift with this button.

5.6 Manual equalisation of the lift

- If the SST (Safety-Star-System) makes out a difference of approx. 40 mm, it will stop the lift automatically.
- An equalisation has to be prepared
- Remove the top covers of the aggregate and the covers of the control box.
- In the control box unit you find the DIP-switches.

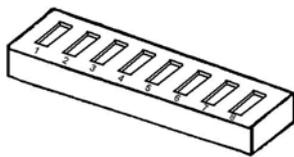

Dip-switch on the board in the box.

An access on the Dip-Switch is only allowed when the main switch is switched off and only by instructed, authorized technical staff.

- Dip-switch 5 (regulation ON/OFF).
- Dip-switch 1 (only platform 1 moveable).
- Dip-switch 2 (only platform 2 moveable).
- Dip-switch 7 (reset – zero the lift in the lowest position).

Enforce the equalisation:

- Equalize platform 1.
- Move the Dip Switch 5 on position “off” (regulation off).
- Move the Dip switch 1 on Position “on” (Dip switch 1 for platform 1).

- Press the button „lifting“ or „lowering“ and simultaneously the override switch until the platform has the same height.
- Move the Dip switch 1 on Position „off“.
- Move the Dip switch Dip 5 on Position „on“ (regulation on).
- Press the button „lowering“ until the lift reaches the lowest position to do a reset (compare chapter „Reset after a emergency lowering“)
- Mount the covers again.

6. Troubleshooting

If the lift does not work properly, the reason for this might be quite simple. Please check the lift for the potential reasons mentioned on the following pages. If the cause of trouble cannot be found, please call the technical service.

Problem: Motor does not start!

- Potential causes:
- *no power supply*
 - *main switch is not engaged*
 - *fuse defective*
 - *the feed line is cut*
 - *thermal switch in the motor is active (let it cool down)*

Problem: Motor starts, lift does not lifting!

- Potential causes:
- *The vehicle is too heavy*
 - *Level of the oil is too low*
 - *The emergency lowering screws are not closed*
 - *The hydraulic hoses are dirty*

Problem: The lift does not lowered!

- Potential causes:
- *The lift is standing on a obstacle*
 - *The hydraulic valve is defective*
 - *fuse defective*
 - *button „lowering“ is not pressed*
 - *the holding valve is defective*

Problem: The equalizing does not work

- Potential causes:
- *wrong button pressed*
 - *hydraulic valve defective*
 - *fuse defective*

6.1 Driving on an obstacle


If the Safety-Star-System recognizes a difference of 40 mm between the platforms then it switches off the lift.

6.1.1 Remove the object



Only trained and authorized staff is allowed to work with the DIP-switches! The main-switch has to be switched off!

- Remove the cover of the operating unit and the control box.
- Press the button „Reset“ (1) and hold it. (see pic. 2, „Reset Achskontroller 1“)

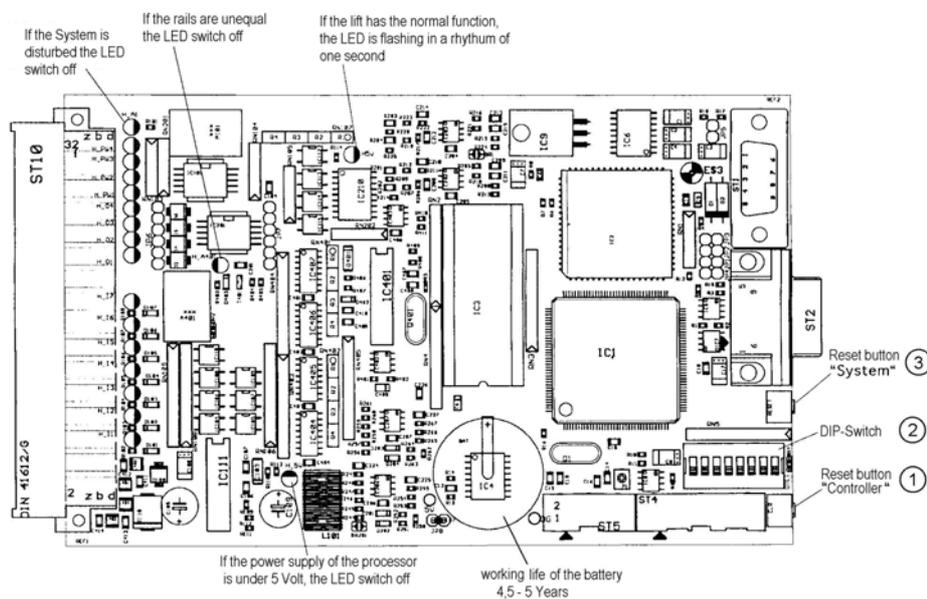

pic. 2: circuit board in the control box

- Switch-off the main switch and wait 5 sec. Hold the reset button.
- Switch-on the main switch and wait 5 sec. Hold the reset button.
- Let go off the reset button.
- Move all the Dip-switch on position „off“.
- Move the Dip-switch 1 and 2 on position „on“.
- **Caution:** This procedure can only be done when the lift is **not** at the maximum height.
- Carefully watch the car on the lift and its reaction.
- Press the „lifting“ button until the object can be removed.
- The side of the lift that is higher must be lowered with the help of the corresponding Dip-switch. (see „Equalisation of the two lifting platforms“).
- After the equalizing of the runways, a reset has to be done.
- Move all the Dip-switches on position „off“.

- Move the Dip-switch 5 on position „on“.
- Press the button „reset“ (1) and hold it.
- Switch-off the main switch and wait 5 sec. Hold the reset button.
- Switch-on the main switch and wait 5 sec. Hold the reset button.
- Let go off the reset button.
- Press the button „lowering“ until the lift (both platforms) is in the lowest position and the acoustic signal stops beeping.
- Move the Dip-switch 7 on position „on“.
- Dip-switch 5 stays on „on“ position.
- Press the button „reset“ (1) and hold it.
- Switch-off the main switch and wait 5 sec. Hold the reset button.
- Switch-on the main switch and wait 5 sec. Hold the reset button.
- Let go off the reset button.
- Dip-switch 5 stays in „on“ position.
- Move the Dip-switch 7 on position „off“.
- On the computer-board must now three diodes lighten permanently. One additional diode must be blinking in the frequency of approx. 1 sec.
- Raise and lower the automotive lift a few times without load. Observe the process.
- Mount the cover.

6.2 Emergency lowering of the main lift/ wheel free lift



A emergency lowering is an intervention into the control of the lift and can be done only by experienced expert.

The emergency lowering must be carried in this order. Otherwise a malfunction can lead it to damages or lead to danger for body and lives.



Every kind of external leakage must be removed. This is necessary particular before an emergency lowering.

UNI CLTAggre.jpg



pic.3: hydraulic bloc

Reasons, that can make an emergency lowering necessary, are e.g. a defect of the electric system or disturbances of the valves, etc.

In the case of **power failure**, the emergency-lowering can only be done if the automotive-lift is not blocked in a safety device. If the lift is locked, the command valve cannot be opened and the security system cannot be opened. Wait for the end of the blackout in this case.

In the case of **defective electromagnetic valves**, the hydraulic valves of the lift will not open any more. Therefore the lift can not be lowered. In this case there is the possibility to open the hydraulic valves manually and to lower the lift into its lowest position, so that the vehicle can be driven off.

Preparation to the emergency lowering

1. Switch off the main switch and safe it. (lock it)



The emergency lowering can only be performed when the interactive Safety-Star-System is not locked.

2. To execute an emergency lowering, the interactive security system has to be opened. Connect a hand pump with the measuring connection M3 at the hydraulic bloc. Approximately 100 bar are needed to raise the lift 10 mm.
3. Unlock the security system manually in the direction of the arrow. (see pic. 4). Put a suitable object (e.g. metal disc) between the cylinder and the flange. (see pic. 4, white arrow)
4. Repeat this measure with the other cylinder.



pic. 4: unlocking the cylinders

Procedure of the emergency lowering (main lift)

- Condition: The security system isn't locked.
- Open the locknut N1 & N2 (red) of the hydraulic block

- Turn carefully, maximal one rotation anticlockwise, the emergency-lowering screw N1 with a suitable tool (hexagon spanner 5). The lowering of one platform starts. Lower the platform approx. 5- 10 cm then close the emergency-lowering screw. If the platform does not lower, the cylinder is locked. Repeat the process of unlocking the cylinder.
- Repeat the procedure with the set screw N2.
Repeat this alternate with the set screws N1 and N2 until the lift has reached his lowest position.
- If the lift is in the lowest position turn the set screws clockwise and safe it with the locknuts.
- Remove the hand pump and the objects between the cylinder and the flange!



The complete process must be observed by the operator. Close the emergency lowering screws when any danger appears. After finishing the emergency lowering, the set screws and the locknuts must be brought back into the original position, otherwise a malfunction of the lift may occur.



Do not use the lift until defective parts are exchanged!!



Before the initiation after an emergency lowering, the objects between the cylinder and the flange have to be removed! Otherwise the security devices are out of function and this means danger to life and danger of damages!

6.2.2 Preparation for the emergency lowering (wheel free lift)

1. Switch off the main switch and safe it. (lock it)



The emergency lowering can only be performed when the interactive Safety-Star-System is not locked.

2. To execute an emergency lowering, the interactive security system has to be opened. Connect a hand pump with the measuring connection M3 at the hydraulic bloc. The double seat valves SV1, SV2, SV3 and SV4 have to be kept pressed manually (see pic. 5, pos. X) Further persons can make this action easier. Approximately 100 bar are needed to raise the wheel free lift 10 mm.



pic. 5: SV1 & SV2 position of the double seat valves

3. Unlock the security system manually in the direction of the arrow. (see pic. 6).
Put a suitable object (e.g. metal disc) between the cylinder and the flange.
(see pic. 6, white arrow)
2. Repeat this measure with the other cylinder.



pic. 6: unlocking the cylinders

Procedure of the emergency lowering (wheel free lift)

- Condition: The security system is not locked.
- The double seat valves are pressed (see pic. 5, pos. X).
- Open the locknut N1 & N2 (red) of the hydraulic block
- Turn carefully, maximal one rotation anticlockwise, the emergency-lowering screw N1 with a suitable tool (hexagon spanner 5). The lowering of one platform starts. Lower the platform approx. 5- 10 cm then close the emergency-lowering screw. If the platform does not lower the cylinder is locked. Repeat the process of unlocking the cylinder.
- Repeat the procedure with the set screw N2.
Repeat this alternate with the set screws N1 and N2 until the lift has reached his lowest position.

- If the wheel free lift is in the lowest position turn the set screws clockwise and safe it with the locknuts.
- Let off the double seat valves.
- Remove the hand pump and the objects between the cylinder and the flange!



The complete process must be observed by the operator. Close the emergency lowering screws when any danger appears. After finishing the emergency lowering, the set screws and the locknuts must be brought back into the original position, otherwise a malfunction of the lift may occur.



Do not use the lift until defective parts are exchanged!!



Before the initiation after an emergency lowering, the objects between the cylinder and the flange have to be removed! Otherwise the security devices are out of function and this means danger to life and danger of damages!

6.3 Reset the main lift after an emergency lowering



Only when the lift is in the lowest position is the reset of the lift possible.



An access on the Dip-Switch is only allowed when the main switch is switched off and only by instructed, authorized technical staff.

- a) There musn't be a vehicle on the lift.
- b) Remove the cover of the operating unit.
- c) Remove the cover of the electrical large box.
- d) Press the button 1 (see pic. 2) and hold it.
- e) Switch-off the main switch and wait 5 sec. Hold the reset button.
- f) Switch-on the main switch and wait 5 sec. Hold the reset button.
- g) Let go off the reset button.
- h) Press the button „ lowering“ until both platforms are in the lowest position.
- i) If necessary repeat several times the steps d) until h) so that the lift is surely in the lowest position.
- j) After that move the Dip-switch 7 on position „on“.
- k) Dip-switch 5 stays on position „on“.
- l) Repeat the steps d) until h)
- m) After that, move the Dip-switch 7 on position „off“. Dip-switch 5 stays on position „on“.

- n) On the computer-board must now three diodes lighten permanently. One additional diode must be blinking in the frequency of approx. 1 sec.
- o) Raise and lower the automotive lift a few times without load. Observe the process.
- p) Mount the covers.

7. Inspection and Maintenance of Nussbaum lifts



Before a maintenance, all preparations are to enforce that with maintenance-working and repair-working at the lift no danger for body and lives and for damages of objects exists.

A regular service has to be performed in regular distances of 3 months through the operator in accordance with following service manual.

7.1 Maintenance plan of the lift

- Generally do not remove the plastic cover of the piston rod. Only in case of heavy dirt deposit clean the piston rods of the hydraulic cylinders from deposit.
- Grease the piston rods with a high capacity lipid (approx. 5 g of S2 DIN51503 KE2G of the Renolit Company).
- Clean and lubricate the moving parts of the lift (hinge bolts, sliding pieces, sliding surfaces) grease with a multipurpose lipid (example: Auto Top 2000 LTD. Agip).
- Grease the lubricate nipples with a multipurpose lipid. (example: Auto Top 2000 LTD. Agip).
- Check the colour if necessary make a repair.
- Check the hydraulic hoses
- Check the hydraulics-hoses for leakage.
- Check the oil level. Fill in a clean, high quality oil (32 cst) in the tank.
- The hydraulic oil has to be changed at least once a year. To change the oil, lower the lift into the lowest position. Empty the tank and replaced clean oil, approx. 40 litres are needed. A high quality hydraulic oil is recommended, its should be 32 cst. (e.g. HLP 32 LTD. OEST Company)
Use a ATF-Suffix hydraulic-oil (OEST Company) if the ambient temperature is under 5 degree centigrade. After the fill up, the hydraulic oil must be between the upper and low marking of the oil level gauge.
- After § 52-3 of the VBG 14 german regulation, exchange the hydraulic hoses if its necessary, but latest after 6 years.
- Check the welding of the lift.
- Check the safety device of the lift.
- Check the Polymer supports and replace them if its necessary.

7.2 Cleaning of the automotive lift

A regular and appropriate maintenance served the preservation of the lift.

It can be a prerequisite for claims at possible corrosion.

The best protection for the lift is the regular cleaning of dirt of all manner.

- Including this:

- de-icing salt
- sand, pebble stone, natural soil
- industrial dust of all manner
- water ; also in connection with other environmental influences
- aggressive deposit of all manner
- constant humidity by insufficient ventilation

How often must the lift be cleaned ?

This is dependent on the use, of the working with the lift, of the cleanness of the workshop and location of the lift. The degree of the dirt is dependent on the season, of the weather conditions and the ventilation of the workshop.

Under bad circumstances it is necessary to clean the lift every week, but a cleaning every month can suffice.

Clean the lift and the floor with a non-aggressive and non-abrasive detergent. Use gentle detergent to clean the parts. Use an standard washing-up liquid and lukewarm water.

- Do not use for cleaning a steam jet cleaning
- Remove all dirt careful with a sponge if necessary with a brush.
- Pay attention that are no remains of the washing-up liquids on the lift after cleaning.
- Do not use aggressive means for cleaning the workshop floor and the automotive lift.
- A permanent contact with every kind of liquid is forbidden. Do not use any high pressure device for cleaning the lift.

Turning moment for screws

property class 8.8

	0,10*	0,15**	0,20***
M8	20	25	30
M10	40	50	60
M12	69	87	105
M16	170	220	260
M20	340	430	520
M24	590	740	890

- * sliding friction 0,10 for very good surfaces, lubricated
- ** sliding friction 0,15 for good surfaces, lubricated oder dry
- *** sliding friction 0,20 surface black or phosphatized, dry

8. Security check

The security check is necessary to guarantee the safety of the lifting during use. It has to be performed in the following cases:

1. Before the initial operation, after the first installation
Use the form “First security check before initiation”
2. In regular intervals after the initial operation, at least annually.
Use the form “Regular security check at least annually”
3. Every time the construction of that particular lift has been changed.
Use the form “Extraordinary security check”

 *The first and the regular security check must be performed by a competent person. It is recommended to service the lift at this occasion.*

 *After the construction of the lift has been changed (changing the lifting height or capacity for example) and after serious maintenance works (welding on carrying parts) an extraordinary security check must be performed by an expert.*

This manual contains form with a schedule for the security checks. Please use the adequate form for the security checks. The form should remain in this manual after they have been filled out. In the following there is a short description about special safety devices.

9. Installation and Initiation

9.1 Installation of the automotive lift

You can choose between two installation places of the operating unit: The position of the operating unit can be chosen in drive-in direction right or in drive-in direction left.

9.2 Regulations for the installation

- The installation of the lift is performed by trained technicians of the manufacturer or its distribution partner. If the operator can provide trained mechanics, he can install the lift by himself. The installation has to be done according to this regulation.
- The standard lift must not be installed in hazardous locations or washing areas.
- Before installation a sufficient foundation must be proved or constructed.

An even installation place has to be provided. The foundations must be based in a frost resistance depth, both outside and indoors, where you must reckon with frost.

- An electrical supply 3~/N+PE, 400 V, 50 Hz has to be provided. The supply line must be protected with T16A (VDE0100 German regulation). The minimum diameter amounts to 2,5 mm².
- All cable ducts have to be equipped with protective coverings to prevent accidents.

9.3 Erection and doweling of the lift

1. Take carefully out the lift of the wood-crate.

Do not pull apart the scissors of the lift !

2. Install the lift according to the data sheet and the foundation plan.
3. Remove the cover of the operating unit.
4. Install the operating unit according to the datasheet and connect the power supply.
5. Connect the hydraulic hoses and the wires of the measuring system with the aggregate.

The hoses and wires should not cross each other

6. Fill in the hydraulic oil (approx. 40 litres)
6. Press shortly the button „lifting“. Observe the direction of rotation of the motor.
7. If no platform raises, check again the direction of rotation of the motor and change two phases of the power supply if it is necessary (attention: only by 3 phase supply).
9. Press the button „lifting“ until the lift is on a height of approx. 10 cm.
10. Press the button „lowering“ until both platforms are in the lowest position and the acoustic signal cannot be heard anymore.
11. Repeat the steps 7 to 10 until the lift surely is in the lowest position.
12. Press the button „lifting“ until the lift is standing on a height of approx. 30 cm. (above the CE-Stop)
13. Press the button „lowering“ until the lift stops at the CE-Stop. Let the button off.
14. Press the button „lowering“ until both platforms are in the lowest position and the acoustic signal cannot be heard anymore.
15. Repeat the steps 12 till 14.
16. Press the button „lifting“ until the lift reaches the highest position.
17. Press the button „lowering“ until the lift is in the lowest position.
18. Press the button „lifting“ again until the lift reaches the highest position.
19. The lift was adjusted by these individual steps to its normal function.
20. Adjust the lift: first one base plate, than the second base plate. If there is an uneven floor even it with metal sheets. A continuous contact between the floor and the base plate must be guaranteed to avoid hollow spaces.
21. Dowel the lift: **Nussbaum Company demands LIEBIG safety dowels (german dowel manufacturer) or equivalent dowels of other manufacturer but: observe their regulations.**
Before doweling check the concrete floor (with quality B25!) if the concrete floor

goes to the top edge of the floor. For an existing concrete floor the dowels have to be chosen according to pic. 8. If floor tiles are on the concrete floor, the dowels have to be chosen according to pic. 9. It's important for the trouble-free working that the base plates are clean and the guides of the sliding block are clean and greased.

Check the adjustment of the base plates and dowel the lift: Bore the holes to fix the dowels through the borings of the base plates. Clean the holes with pressure air. Put in the safety dowels.

22. Dowel the operating unit.

23. Fine adjustment of the lift: first one base plate, then the second base plate. If there is an uneven floor even it with metal sheets. A continuous contact between the floor and the base plate must be guaranteed to avoid hollow spaces.

24. Tighten the Liebig-dowels with the dynamometric key ($M = 80\text{Nm}$).



Each dowel must be tightened with the demanded torque. Otherwise the normal function of the lift can not be guaranteed.

Observe the regulations of other dowel-manufacturers.

25. Raise and lower the lift several times with load. Check the torque of the dowels and check the hydraulic parts for tightness.

26. Mount the covers: ***Do not damage the cables.***

27. The lift has now its normal function



When there are disturbances, the customer service has to be called!

9.4 Initiation



Before the initiation a security check must be performed. Therefore use form: First security check.

If the lift is installed by a competent person, he will perform this security check. If the operator installs the lift by himself, he has to instruct a competent person to perform the security check.

The competent confirms the faultless function of the lift in the installation record and form for the security check and allows the lift to be used.



Please send the filled installation record to the manufacturer after the installation.

9.5 Changing the installation place

If the place of installation shall be changed, the new place has to be prepared in according to the regulations of the first installation. The changing should be performed in accordance with the following points:

- Raise the lift on approx. 1000 mm.
- Remove the cover of the hydraulic tubes.
- Loose the dowels.
- Lower the lift in the lowest position.
- Loose the plug of the power supply.
- If necessary loose the hydraulic hoses only on the operating unit.
- If necessary use blind plugs to close the hoses.
- Disconnect the power supply.
- Transport the lift to its new place.
- Install the lift in accordance with chapter 9 “ Installation and Initiation”.



Use new dowels, the used dowels can not be used anymore.



A security check must be performed before reinitiation by a competent person. Use form “Regular security check”

Pic. 8: choice of the dowel length without floor pavement or tile surface

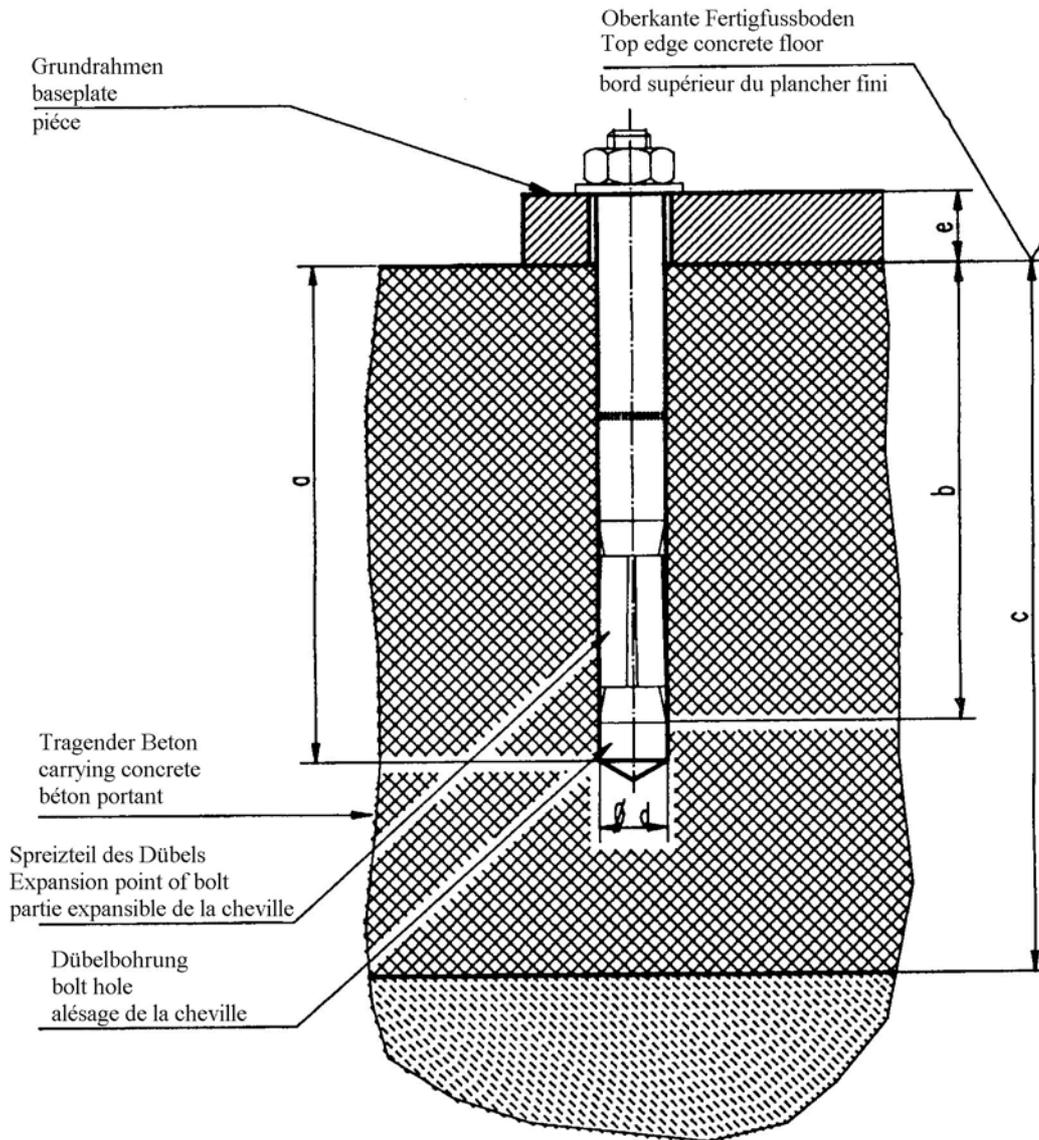


Table to pic. 8

Liebig-dowels

Dowel type		B20/75	B20/100
Drilling depth	a	115	140
Min. anchorage depth	b	85	85
Thickness of concrete	c	180	180
Diameter of bore	d	20	20
Thickness of the lift-pieces	e	0-40	40-65
Number of dowels		16	16
Starting torque		according to dowel manufacturer	

Pic 9: choice of the dowel length with floor pavement or tile surface

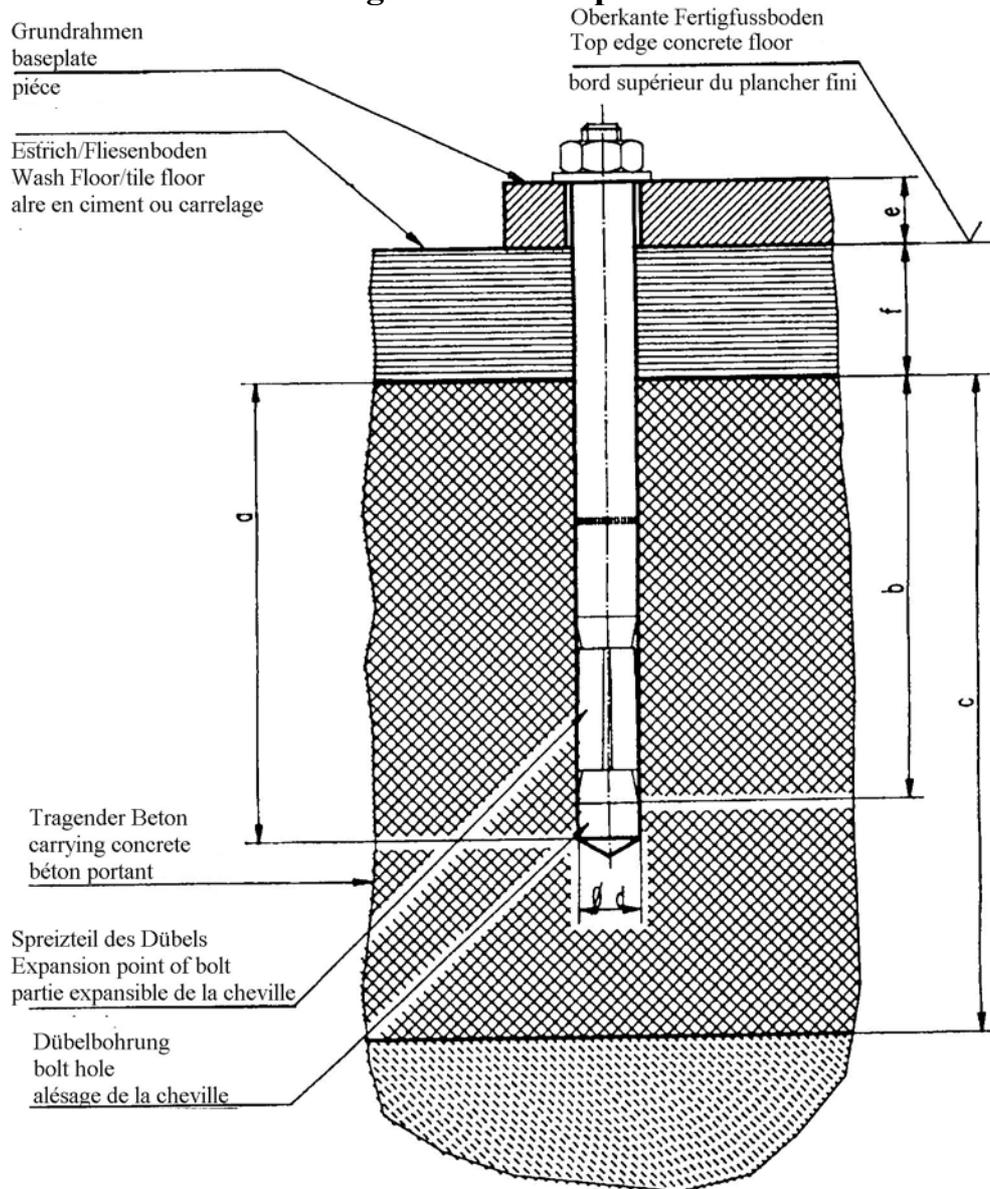


Table to pic 9

Liebig-dowels

Dowel type		B20/100	B20/125	B20/135	B20/175
Drilling depth	a	140	165	175	215
Min. anchorage depth	b	85	85	85	85
Thickness of concrete	c	180	180	180	180
Diameter of bore	d	20	20	20	20
Thickness of the lift-pieces thickness of floor pavement	e+f	40-65	65-90	90-100	100-140
Number of dowels		16	16	16	16
Starting torque		according to dowel manufacturer			

First security check before installation

 Filling out and leave in this manual

kind of check	all right	defect missing	veri- fication	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check



Filling out and leave in this manual

kind of check	all right	defect missing	veri- fication	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	veri- fication	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	verification	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	verification	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	ver-ification	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	verification	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	verification	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Regular security check

 Filling out and leave in this manual

kind of check	all right	defect missing	verification	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Extraordinary security check before initiation

 Filling out and leave in this manual

kind of check	all right	defect missing	veri- fication	remark
Type plate.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Short operating instruction.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Warning designation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function override switch.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function button "lifting/lowering".....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition / function ramps.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function interactive security system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
General condition of the lift.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Security of the bolts.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition bolts and bearing.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Construction (deformation, cracking).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Torque moment of the dowels.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fixed seat of the screws.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition operating unit.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition welding.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition piston rod.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition of the covers.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Closeness of the hydraulic system.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Level of hydraulic oil.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition hydraulic hoses.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition electrical wires.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test with vehicle.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function equalisation of the rails.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function CE-Stop.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Condition Polymer supports.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function test wheel free lift (with vehicle).....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Function lightning.....	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

(mark here applicable, in case of verification mark in addition to the first mark!)

Security check carried out:.....

Carried out the company:.....

Name, address of the competent:.....

Result of the Check:

- Initiation not permitted, verification necessary**
- Initiation possible, repair failures until.....**
- No failings, Initiation possible**

.....
signature of the expert

.....
signature of the operator

If failures must be repaired:

Failures repaired at:
(Use another form for verification!)

.....
signature of the operator

Manual service operation over the keyboard

Activity only for authorized persons.

One foil-keyboard and one LC-Display for the position-ad and the service-operation are integrated in the control-box/operating unit.

1. After switching on the installation, the following ad appears on the display

Nussbaum Hebetechnik UNI-LIFT CLT

After 5 seconds, one switches automatically to the position-ad 2.

2. Position-ad

Ad the position of the 2 axes during the normal operation of the lift.

A1-A2: position-value of the 2 axes

A1: 0.0
A2: 0.0
 MP1 MP2 MP3

Step during the business a mistake on, the axis becomes with the mistake through „-E - „, in the position-ad marked.

The ad changes between the position-ad and the error message.

Only when a such mistake was caused, should after telephonic consultation with the Fa. Nussbaum, phone, 0049 (0)7853-899-0, the service-functions, (sees section 4 (service-operating) become used.

With full function-willingness of the automotive-lift, the operating of the service - functions, over the foil-keyboard is forbidden.

Examples:

Ad-statuses with synchronism-mistake of axis 1

A1: 50.3 -E-
A2: 0.0

F e h l e r G l e i c h l a u f
--

Function button:

- < * > Change into the time indicator (3)
- < # > change to the service function (4)
- < 1 > switch "on/off" the measure point 1
- < 2 > switch "on/off" the measure point 2
- < 3 > switch "on/off" the measure point 3

3. Elapsed time indicator-ad

The number of the working hours can be extract through the operating. Press the button < * > on the foil-keyboard of the lift.

Ad of the working hours in hours: minute
Only the time is counted, in which the lift actually drives.

Betriebsstunden 0000000:00 h

The return to the position-ad takes place automatically anuses approximately 15 seconds or through operates of the < * > -button.

Function button:

- < * > Return to the position-ad (2).

4. Service-operation

The service operation is used for it, during the initiation (installation) or to do the lift after a disturbance in function again. Only for these two cases, this operating mode of the lift is intended. Is not allowed to activate these functions, if the lift has the normal function. The functions of the service operation can be activated over the foil-keyboard appropriate on the switchbox. To the navigation in the menu system of the service functions serves the buttons:

- < * > **menu-point**
- < # > **confirms the menu-point**

Through presses and confirming " zurück " you can go back from a submenu into the higher ranking menu again.

4.1 Log-in in the service-operation

The operator must log-in in the service-operation to activate the service-functions. He presses during the position-ad the button # and inputs afterwards SERVICE-PIN. After correct input the PIN takes place automatically the change into the service-main menu.

Retrieval of the password for service-functions

Password - - - -

Default-value of the password is ' 1234 '.

This can be altered with demand over the PC-Software, the new password is secured durably with it in the FRAM of the „Achscntrollers“.

Function button:

< * > Back to the position-ad (2).

< 0 > ... < 9 > password input

4.2 Service-Menu

Dialed menu-point becomes through > < marked

<p>>Gesteuert< Achse nullen Hubhöhe zurück</p>
--

Function button:

< * > next menu-point dials

< # > menu-point activates

The menu-point becomes > zurück < activated jumps back this to the position-ad.

4.3 STEERED

Both axes of the lift can be driven individually over the function " GESTEUERT ". The driven axis becomes over " * " marks and demarcates and after it over „ # “ activates. This function can be used only in the disturbance-case!

controlled operation - axis 1 active

<p>*1* 50.3 2 0.0</p>

The controlled business over the ad-functions is only possible if the dip-switch stands 5 on the " Achscontroller " on " ON "!

If the dip-switch 5 is standing on " OFF ", the axe drives over the dip-switch-attitude, independently from the ad-function.

Over the buttons < 1 >, < 2 > is dialed the axes, the steered procedures should become. The dialed axes become on the ad through * X * marks.

If the button < lifting > or < lowering > was pressed afterwards, only the select axe can moved.

! The installation can become destroyed.

Function button:

< * > Abortion and return into the service-menu (4.2)

< 1 > axe 1 activates / deactivates

< 2 > axe 2 activates / deactivates

4.4 Reset of the measuring systems

Over this function, the entire measuring-system of the lift can be put back, (zero). This function is allowed to only after consultation with the service-headquarters of the Fa. Nussbaum (phone) + 49 (0)7853-899-0.

Achse nullen?

Alert message, whether axes should really become reset.

With confirmation of the retrieval with < # > is put down the axes on zero and is jumped back automatically to the position-ad (2) afterwards.

That zeros of the axes is only possible, if the dip-switch 5 on the „Achskontroller“ stands on „ON“.

! The installation can become destroyed.

Function button:

< * > Abortion and return into the service-menu (4.2)

< # > axes becomes on zero favored

4.5 Altitudes restricts

The maximum lifting of the lift can be restricted over the menu-point " HUBHOEHE ". The indicated value can over the button < 1 > increment and over the button < 0 > decrement becomes. After election of the desired lift, becomes over < # > the value taken on. The submenu was deserted.

The submenu was deserted with the button and the changed value was not stored.

Function button:

< * > **Demolition and return into the service-menu without stores**

< # > store the new value and return into the service-menu

< 1 > Increases the lifting height

< 0 > Reduces the lifting height

4.6 going back


From a submenu, one can come back into the paramount menu again. Press the button "ZURÜCK".

Hydraulic parts list

Nr.	description	order number
0.1	oil tank	
0.2	oil filter	980012
0.3	gear pump	9750510112304
0.4	sub oil motor	990445
0.5	oil level gauge	980098
0.6	holding valve	980166
0.7	hydraulic bloc complete	99 529 04 005
0.8	hydraulic block	06-605A-01-01
DB1	pressure relief valve	155211
DB2	pressure relief valve (unlocking cylinder)	155211
M1-M4	measuring connection	155470
VW1	proportional valve	WEP06DA01B0240S
VW2	proportional valve	WEP06DA01B0240S
VW3	4/2-way-valve	WE06DA77A0240X
V1	electric unlockable holding valve	980338
N1	emergency lowering screw	120026
N2	emergency lowering screw	120026
SV1	double seat valve	980853
SV2	double seat valve	980853
1.0	cylinder of the lift	
2.0	unlocking cylinder of the lift	

Hydraulic diagram with wheel free lift

Block, kpl. UNI-LIFT CLT plus
99 529 03 00 5
SN: 158661

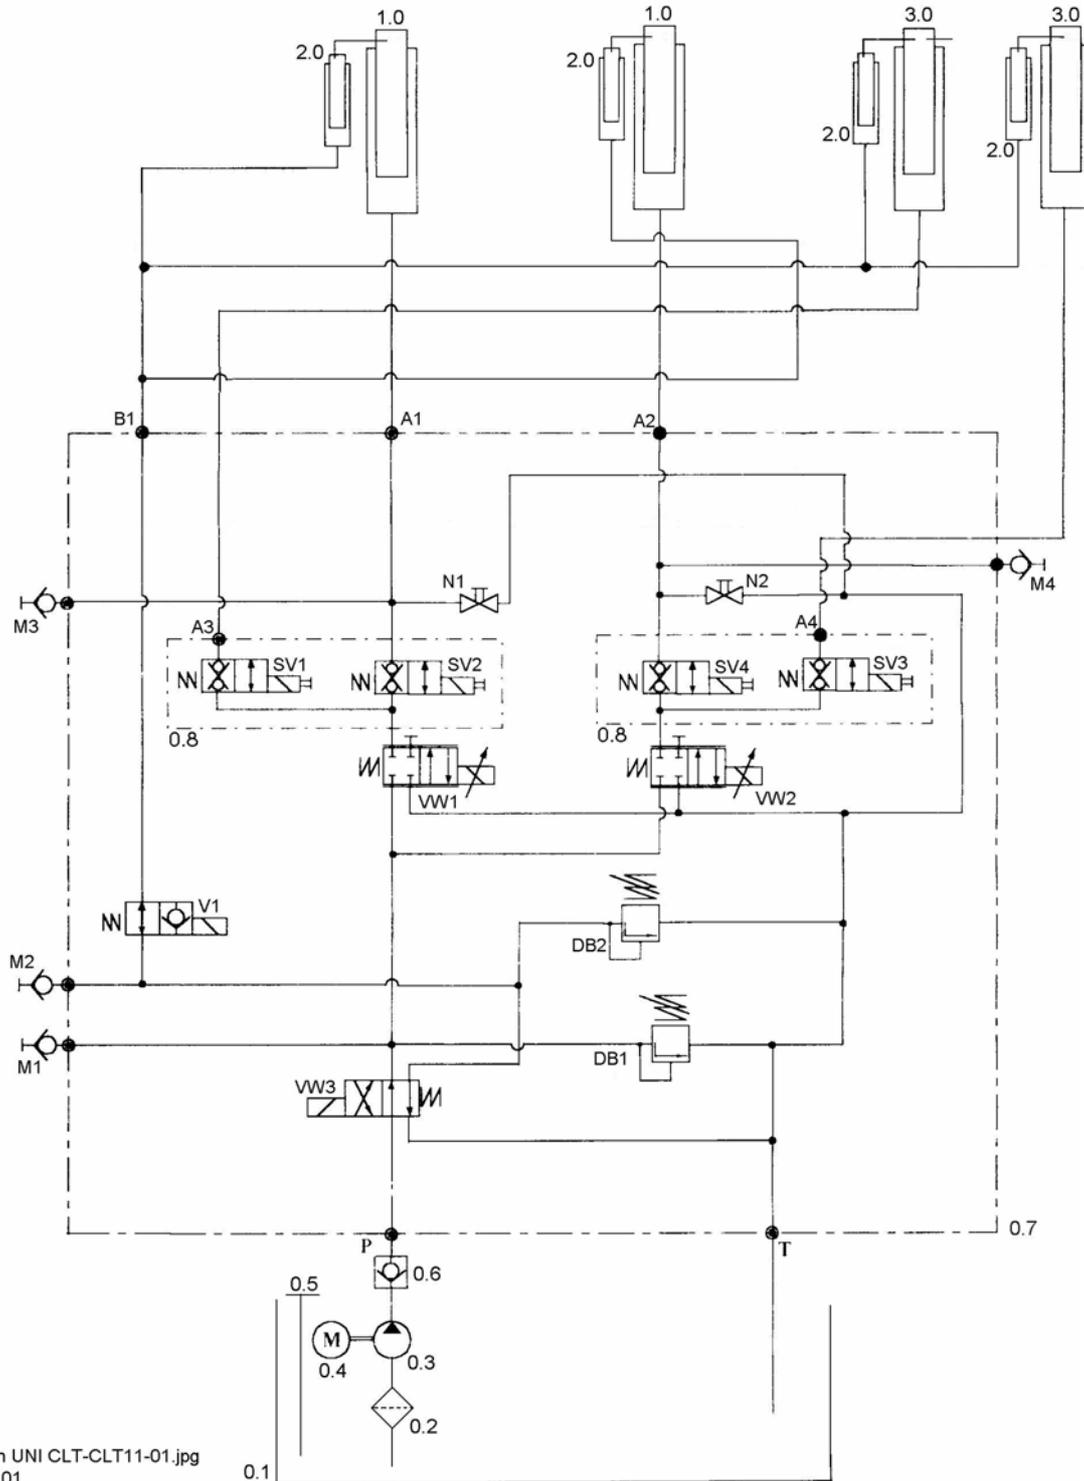


H-Plan UNI CLT-CLT11-01.jpg
26.11.01

Hydraulic parts list


Nr.	description	order number
0.1	oil tank	
0.2	oil filter	980012
0.3	gear pump	9750510112304
0.4	sub oil motor	990445
0.5	oil level gauge	980098
0.6	holding valve	980166
0.7	hydraulic bloc complete	99 529 03 005
0.8	hydraulic block	06-605A-01-01
DB1	pressure relief valve	155211
DB2	pressure relief valve (unlocking cylinder)	155211
M1-M4	measuring connection	155470
VW1	proportional valve	WEP06DA01B0240
VW2	proportional valve	WEP06DA01B0240
VW3	4/2-way valve	WE06DA77A0240X
V1	electric unlockable holding valve	980338
N1	emergency lowering screw	120026
N2	emergency lowering screw	120026
SV1	double seat valve	980853
SV2	double seat valve	980853
SV3	double seat valve	980853
SV4	double seat valve	980853
1.0	cylinder of the lift	
2.0	unlocking cylinder of the lift	
3.0	cylinder of the wheel free lift	

Electric diagram without wheel free lift

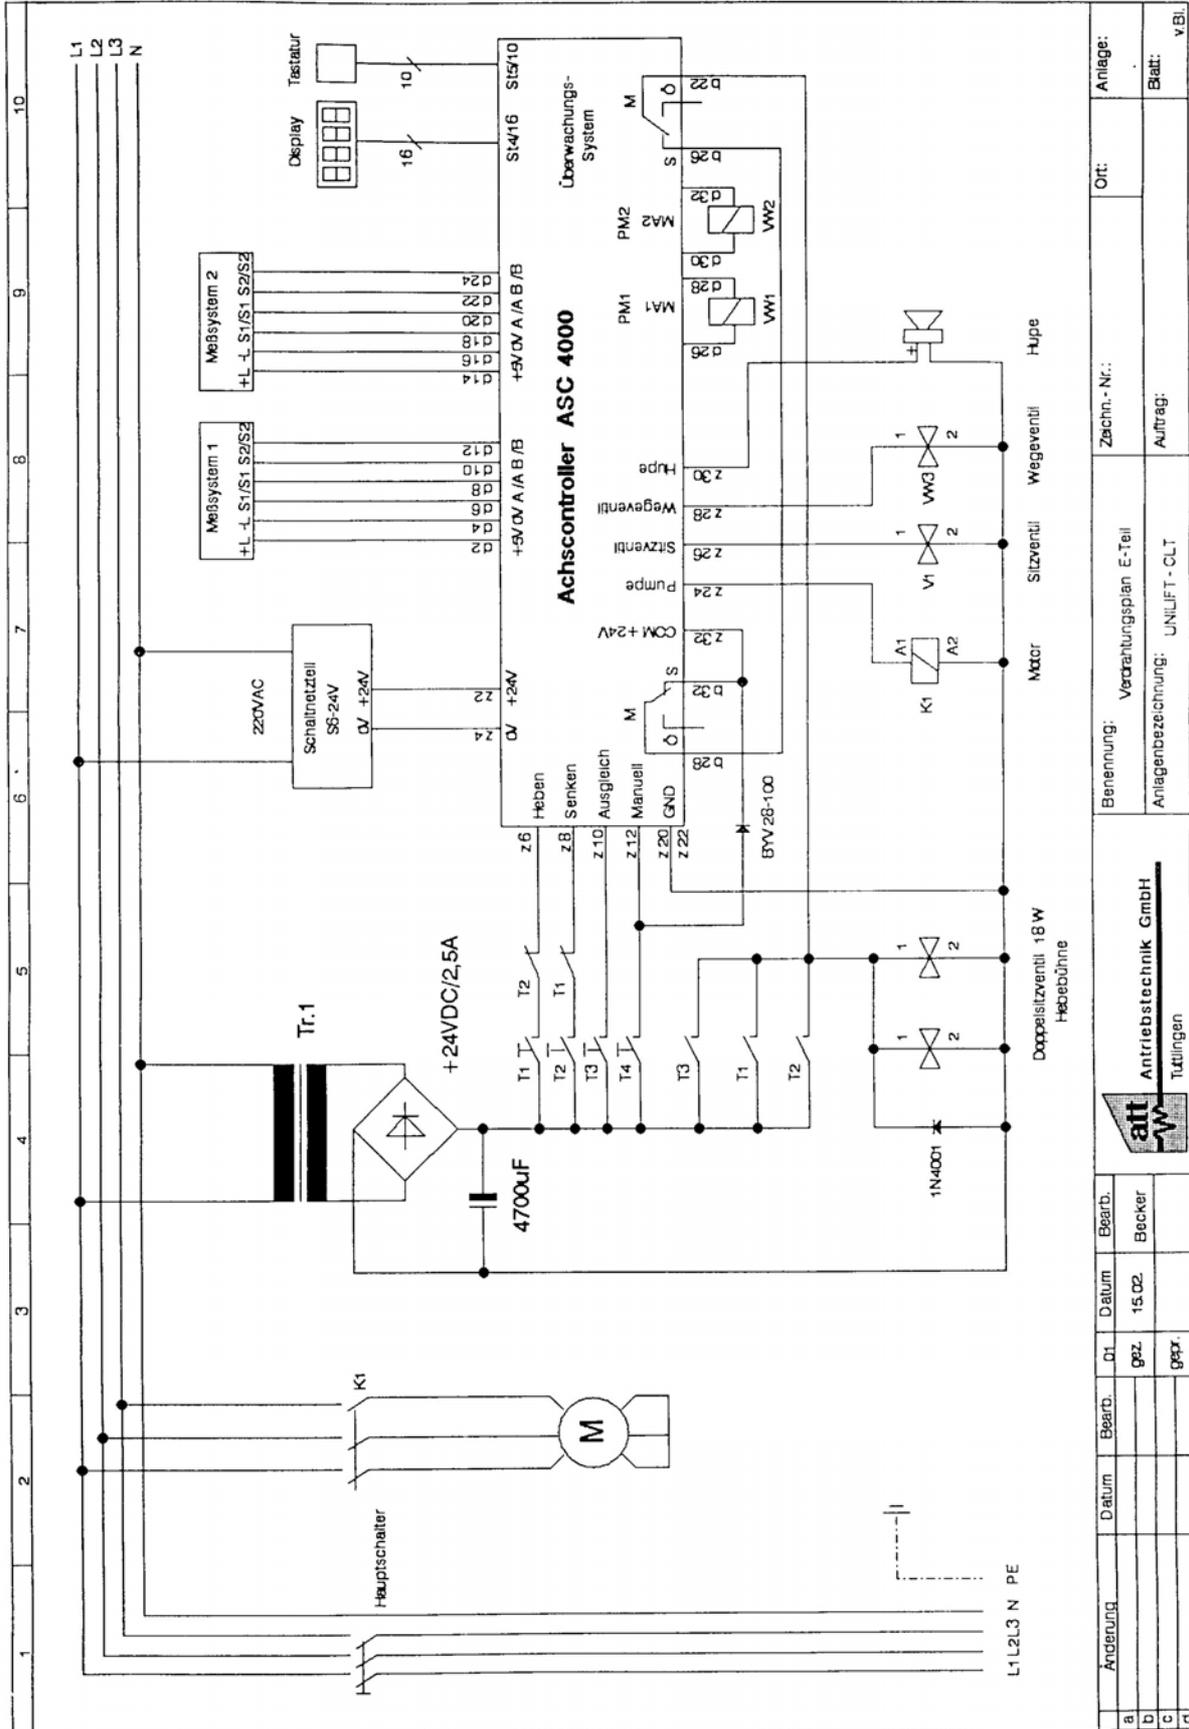

Anforderung		Datum		Bearb.		Benennung:		Zechn.-Nr.:		Anlage:	
a						Verarbeitungsplan E-Teil					
b			15.02.		Becker	UNI-LIFT - CLT		Auftrag:		Blatt:	
c						Anlagenbezeichnung:		Auftrag:		v.B.I.	
d						Antriebs- und Steuerungstechnik GmbH		Tuttlingen			

Electric diagram with wheel free lift

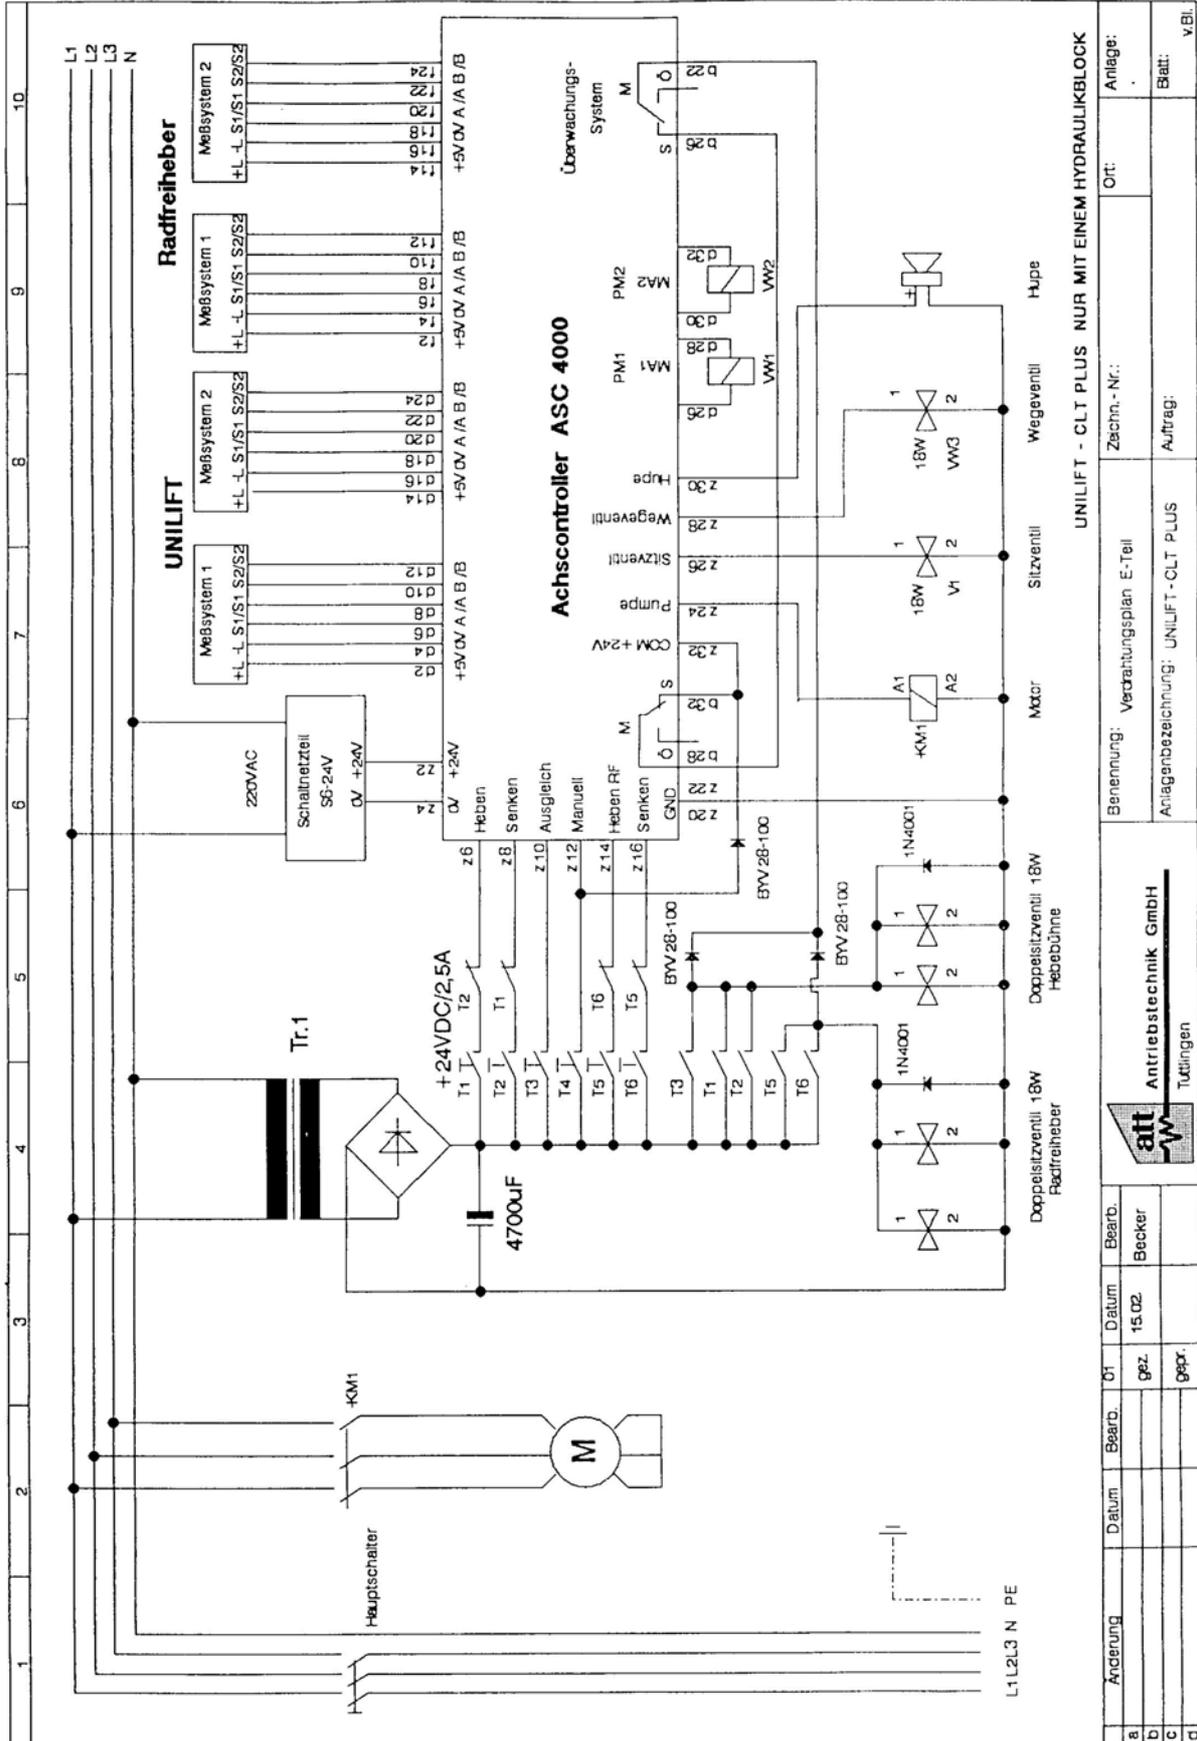

UNILIFT - CLT PLUS NUR MIT EINEM HYDRAULIKBLOCK				
Benennung: Verdrahtungsplan E-Teil	Zechn.-Nr.:			
Anlagenbezeichnung: UNILIFT-CLT PLUS	Auftrag:			
Änderung	Datum	Bearb.	Datum	Bearb.
a			15.02.	Becker
b			gez.	
c			gepr.	
d				
Ort:		Anlage:		
Anlagenbezeichnung: UNILIFT-CLT PLUS		Auftrag:		
Bauteil:		v.Bil.		